Pioneer *sound.vision.soul*

Service Manual

GM-5100T/XU/EW

ORDER NO.
CRT3369

BRIDGEABLE TWO-CHANNEL POWER AMPLIFIER

GM-5100T /XU/EW
GM-5100T /XU/UC
GM-5100T /XU/ES
GM-5100T /XU/CN
GM-510T /XU/UC

For details, refer to "Important check points for good servicing".

PIONEER CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153-8654, Japan
PIONEER ELECTRONICS (USA) INC. P.O.Box 1760, Long Beach, CA 90801-1760 U.S.A.
PIONEER EUROPE NV Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE.LTD. 253 Alexandra Road, #04-01, Singapore 159936

© **PIONEER CORPORATION 2004**

K-ZZB. DEC. 2004 Printed in Japan

SAFETY INFORMATION

CAUTION

This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer.
Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.
Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty.
If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING

This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.
Health & Safety Code Section 25249.6 - Proposition 65

● **Service Precaution**

You should conform to the regulations governing the product (safety, radio and noise, and other regulations), and should keep the safety during servicing by following the safety instructions described in this manual.

[Important Check Points for Good Servicing]

In this manual, procedures that must be performed during repairs are marked with the below symbol.
Please be sure to confirm and follow these procedures.

1. Product safety

Please conform to product regulations (such as safety and radiation regulations), and maintain a safe servicing environment by following the safety instructions described in this manual.

① Use specified parts for repair.

Use genuine parts. Be sure to use important parts for safety.

② Do not perform modifications without proper instructions.

Please follow the specified safety methods when modification(addition/change of parts) is required due to interferences such as radio/TV interference and foreign noise.

③ Make sure the soldering of repaired locations is properly performed.

When you solder while repairing, please be sure that there are no cold solder and other debris.
Soldering should be finished with the proper quantity. (Refer to the example)

④ Make sure the screws are tightly fastened.

Please be sure that all screws are fastened, and that there are no loose screws.

⑤ Make sure each connectors are correctly inserted.

Please be sure that all connectors are inserted, and that there are no imperfect insertion.

⑥ Make sure the wiring cables are set to their original state.

Please replace the wiring and cables to the original state after repairs.
In addition, be sure that there are no pinched wires, etc.

⑦ Make sure screws and soldering scraps do not remain inside the product.

Please check that neither solder debris nor screws remain inside the product.

⑧ There should be no semi-broken wires, scratches, melting, etc. on the coating of the power cord.

Damaged power cords may lead to fire accidents, so please be sure that there are no damages.
If you find a damaged power cord, please exchange it with a suitable one.

⑨ There should be no spark traces or similar marks on the power plug.

When spark traces or similar marks are found on the power supply plug, please check the connection and advise on secure connections and suitable usage. Please exchange the power cord if necessary.

⑩ Safe environment should be secured during servicing.

When you perform repairs, please pay attention to static electricity, furniture, household articles, etc. in order to prevent injuries.
Please pay attention to your surroundings and repair safely.

2. Adjustments

To keep the original performance of the products, optimum adjustments and confirmation of characteristics within specification.
Adjustments should be performed in accordance with the procedures/instructions described in this manual.

3. Lubricants, Glues, and Replacement parts

Use grease and adhesives that are equal to the specified substance.
Make sure the proper amount is applied.

4. Cleaning

For parts that require cleaning, such as optical pickups, tape deck heads, lenses and mirrors used in projection monitors, proper cleaning should be performed to restore their performances.

5. Shipping mode and Shipping screws

To protect products from damages or failures during transit, the shipping mode should be set or the shipping screws should be installed before shipment. Please be sure to follow this method especially if it is specified in this manual.

CONTENTS

SAFETY INFORMATION....2
1. SPECIFICATIONS....5
2. EXPLODED VIEWS AND PARTS LIST....6
2.1 PACKING....6
2.2 EXTERIOR....8
3. SCHEMATIC DIAGRAM....10
3.1 SCHEMATIC DIAGRAM(GUIDE PAGE)....10
4. PCB CONNECTION DIAGRAM....18
4.1 AMP UNIT....18
5. ELECTRICAL PARTS LIST....22
6. ADJUSTMENT....25
7. GENERAL INFORMATION....26
7.1 DIAGNOSIS....26
7.1.1 DISASSEMBLY....26
7.1.2 CONNECTOR FUNCTION DESCRIPTION....28
8. OPERATIONS....29

1. SPECIFICATIONS

Power source	14.4 V DC (10.8 — 15.1 V allowable)
Grounding system	Negative type
Current consumption	30.0 A (at continuous power, 4 Ω)
Backup current	3 mA or less
Average current drawn*	10.0 A (4 Ω for two channels)
	19.0 A (4 Ω for one channel)
Fuse	30 A × 2
Dimensions	300 (W) × 60 (H) × 327 (D) mm
Weight	4.7 kg (Leads for wiring not included)
Maximum power output	250 W × 2 (4 Ω) / 760 W × 1 (4 Ω)
Continuous power output	125 W × 2 (at 14.4 V, 4 Ω, 20 Hz — 20 kHz 0.2% THD)
	380 W × 1 (at 14.4 V, 4 Ω, 20 Hz — 20 kHz 0.8% THD)
	190 W × 2 (at 14.4 V, 2 Ω, 20 Hz — 20 kHz 0.8% THD)
Continuous power output (DIN power)	175 W × 2 (4 Ω) / 520 W × 1 (4 Ω) (DIN45324, +B=14.4 V)
Load impedance	4 Ω (2 — 8 Ω allowable)
	(Bridge connection: 4 — 8 Ω allowable)
Frequency response	10 Hz — 50 kHz (+0 dB, –1 dB)
Signal-to-noise ratio	95 dB (IEC-A network)
Distortion	0.015 % (10 W, 1 kHz)
Separation	70 dB (1 kHz)
Low pass filter	Cut off frequency: 80 Hz
	Cut off slope: –12 dB/oct
Bass Boost	Frequency: 50 Hz
	Level: 0/6/12 dB
Gain control	RCA: 200 mV — 6.5 V
	Speaker: 0.8 — 26 V
Maximum input level / impedance	RCA: 6.5 V / 22 kΩ
	Speaker: 26 V / 40 kΩ

Note:
- Specifications and the design are subject to possible modification without notice due to improvements.

***Average current drawn**
- The average current drawn is nearly the maximum current drawn by this unit when an audio signal is input. Use this value when working out total current drawn by multiple power amplifiers.

2. EXPLODED VIEWS AND PARTS LIST

2.1 PACKING

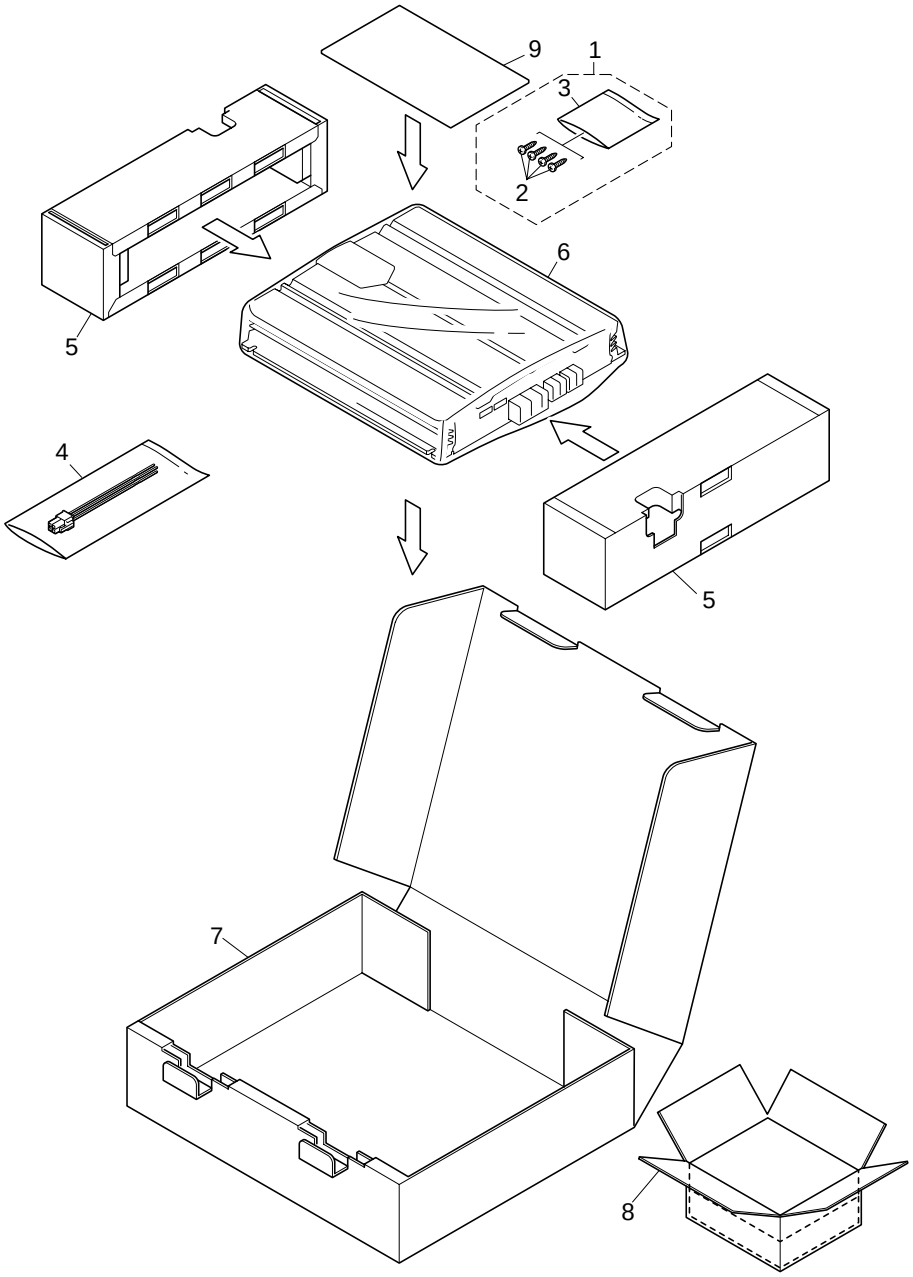

NOTE:

- Parts marked by "*" are generally unavailable because they are not in our Master Spare Parts List.
- The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screws adjacent to ∇ mark on the product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)

● PACKING SECTION PARTS LIST

Mark	No.	Description	Part No. GM-5100T/XU/EW	GM-5100T/XU/UC	GM-5100T/XU/ES	GM-5100T/XU/CN
	1	Screw Assy	CEA4835	CEA4835	CEA4835	CEA4835
	2	Screw	BYC40P180FZK	BYC40P180FZK	BYC40P180FZK	BYC40P180FZK
*	3	Polyethylene Sheet	CNM4338	CNM4338	CNM4338	CNM4338
	4	Cord Assy	CDE7736	CDE7736	CDE7736	CDE7736
	5	Protector	CHP2911	CHP2911	CHP2911	CHP2911
	6	Polyethylene Bag	CEG1317	CEG1351	CEG1317	CEG1317
	7	Carton	CHG5360	CHG5362	CHG5361	CHG5465
	8	Contain Box	CHL5360	CHL5362	CHL5361	CHL5465
	9-1	Owner's Manual	CRD3915	CRD3916	CRD3918	CRB2041
	9-2	Polyethylene Bag	CEG1116	CEG1116	CEG1116	CEG1116
*	9-3	Warranty Card	CRY1157	Not used	Not used	ARY7046
*	9-4	Card	Not used	ARY1048	Not used	Not used
	9-5	Owner's Manual	Not used	Not used	CRD3919	Not used
*	9-6	Caution Card	Not used	Not used	Not used	Not used

Mark	No.	Description	Part No. GM-510T/XU/UC
	1	Screw Assy	CEA4835
	2	Screw	BYC40P180FZK
*	3	Polyethylene Sheet	CNM4338
	4	Cord Assy	CDE7736
	5	Protector	CHP2911
	6	Polyethylene Bag	CEG1351
	7	Carton	CHG5363
	8	Contain Box	CHL5363
	9-1	Owner's Manual	CRD3917
	9-2	Polyethylene Bag	CEG1116
*	9-3	Warranty Card	Not used
*	9-4	Card	ARY1048
	9-5	Owner's Manual	Not used
*	9-6	Caution Card	CRP1324

● Owner's Manual

Part No.	Language
CRD3915	English, Spanish, German, French, Italian, Dutch
CRD3916	English, French, Spanish
CRD3917	English, French, Spanish
CRD3918	English, Spanish
CRD3919	Arabic, Portuguese(B)
CRB2041	Traditional Chinese

2.2 EXTERIOR

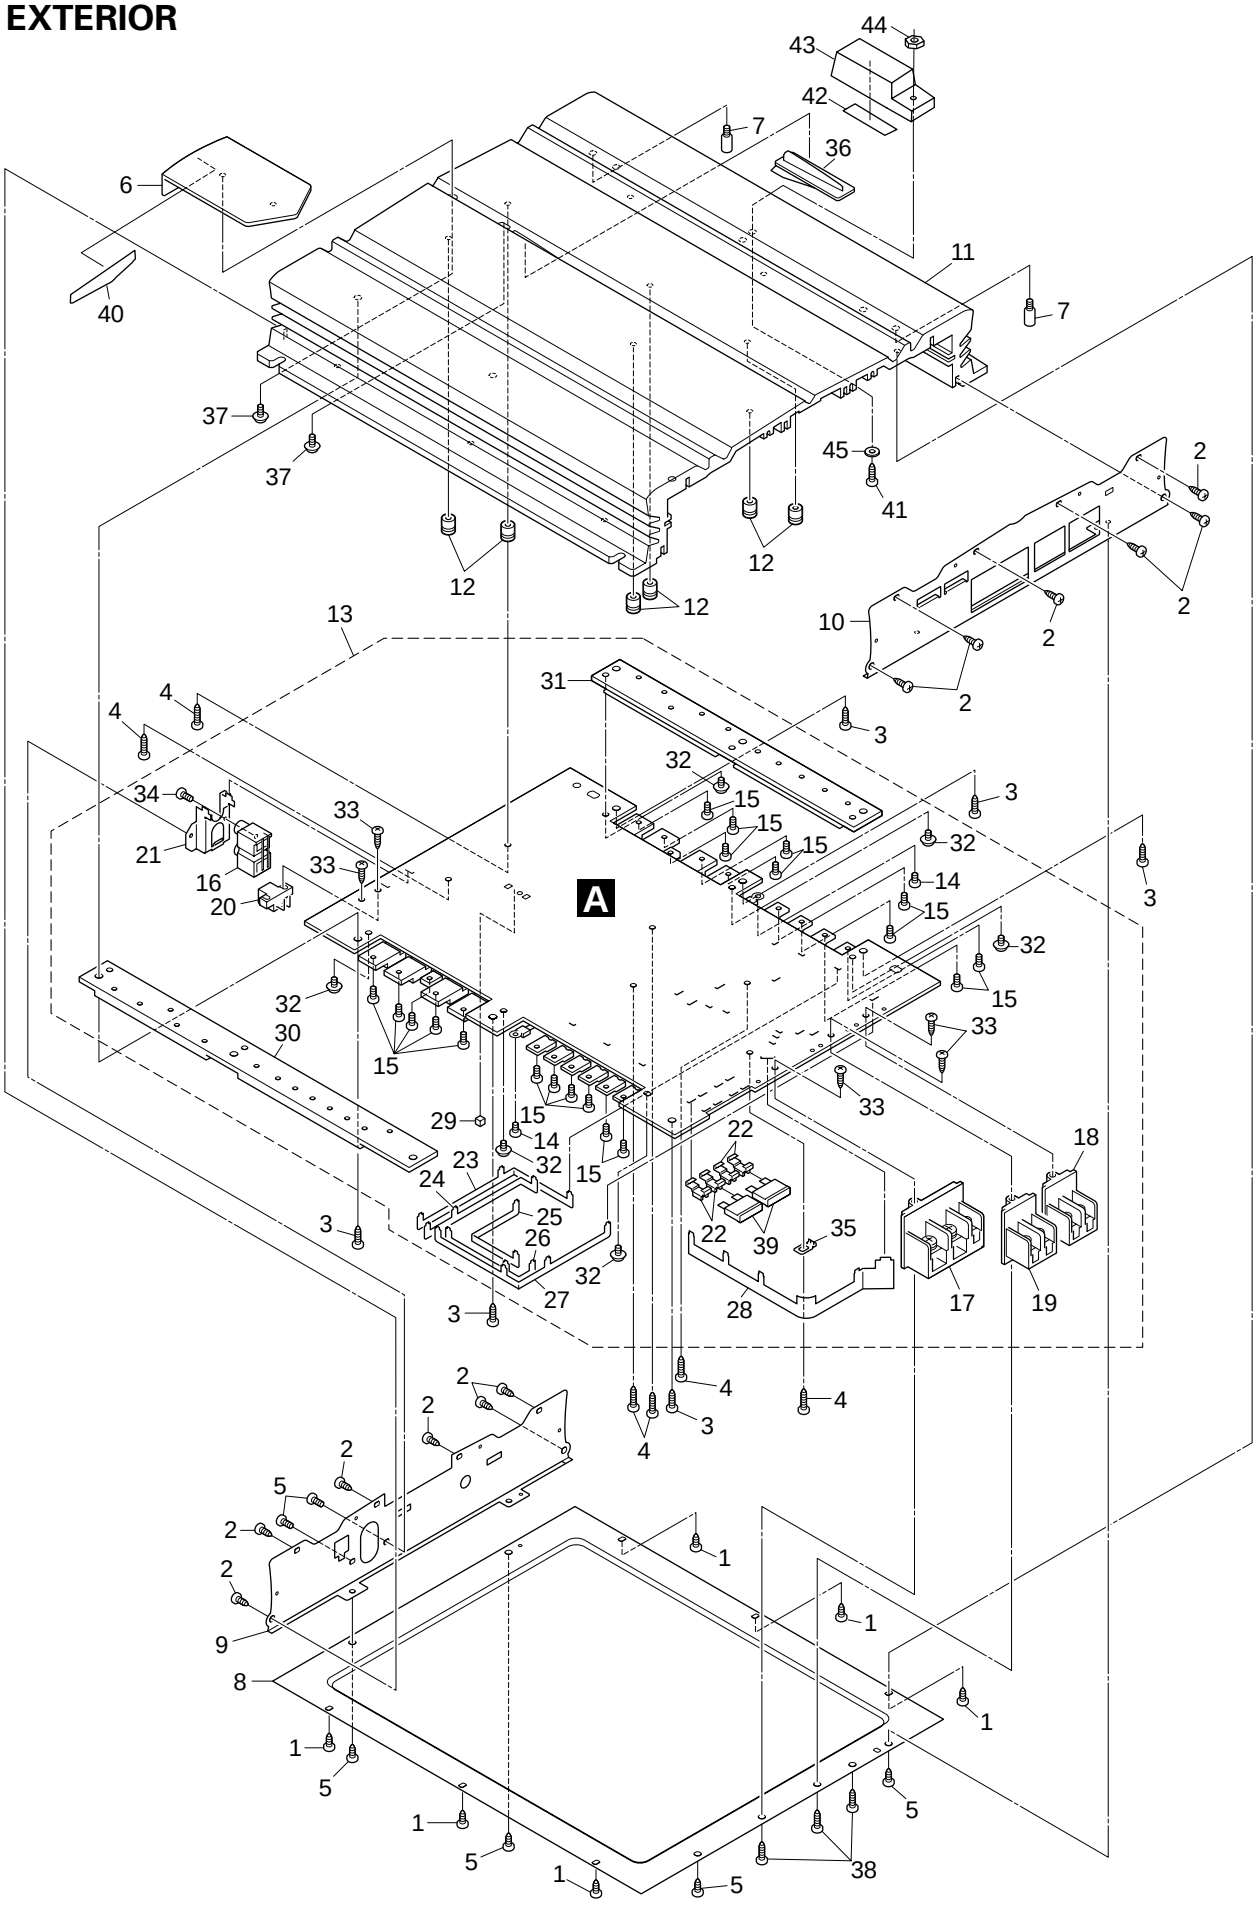
A
44
43
42
7
36
6
11
40
7
37
37
45
41
2
12
12
12
10
2
2
2
13
31
4
4
3
32
34
15
3
33
15
21
15
32
33
16
14
20
A
15
3
32
15
32
30
15
33
15
29
33
15
14
22
18
23
32
15
24
25
22
39
35
26
32
17
19
27
28
3
3
2
4
4
4
3
4
2
2
5
2
2
9
8
1
1
1
1
1
5
5
1
5
1
5
38

● EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	BBZ30P060FTC
	2	Screw	BBZ30P080FZK
	3	Screw	BBZ30P100FZK
	4	Screw	BBZ30P120FTC
	5	Screw	BSZ30P050FZK
*	6	Badge	See Contrast table(2)
	7	Screw	CBA1810
	8	Case	CNB3071
	9	Panel	See Contrast table(2)
	10	Panel	See Contrast table(2)
	11	Heat Sink	See Contrast table(2)
	12	Spacer	CNV8256
	13	Amp Unit	See Contrast table(2)
	14	Screw	BBZ30P060FZK
	15	Screw	BBZ30P080FZK
	16	Pin Jack(CN111)	See Contrast table(2)
	17	Terminal(CN853)	See Contrast table(2)
	18	Terminal(CN855)	See Contrast table(2)
	19	Terminal(CN856)	See Contrast table(2)
	20	Socket(CN801)	CKM1463
	21	Holder	CND2456
	22	Terminal	CND2458
	23	Buss Bar	CND2467
	24	Buss Bar	CND2468
	25	Buss Bar	CND2469
	26	Buss Bar	CND2470
	27	Buss Bar	CND2472
	28	Buss Bar	CND2729
	29	Spacer	CNM9570
	30	Sub Heat Sink	CNR1778
	31	Sub Heat Sink	CNR1779
	32	Screw	IMS30P050FZK
	33	Screw	PPZ30P100FSN
	34	Screw	PPZ30P100FZK
	35	Terminal(CN850)	VNF1084
	36	Lighting Conductor Unit	CXC4334
	37	Screw	IBZ30P060FTC
	38	Screw	PPZ30P100FZK
⚠	39	Fuse(FU100,101)(30A)	CEK1330
	40	Sheet	CNM9571
	41	Screw	See Contrast table(2)
*	42	Seal	See Contrast table(2)
	43	Holder	See Contrast table(2)
	44	Nut	See Contrast table(2)
	45	Washer	See Contrast table(2)

(2) CONTRAST TABLE

GM-5100T/XU/EW, GM-5100T/XU/UC, GM-5100T/XU/ES, GM-5100T/XU/CN and GM-510T/XU/UC are constructed the same except for the following:

Mark	No.	Description	Part No. GM-5100T/XU/EW	GM-5100T/XU/UC	GM-5100T/XU/ES	GM-5100T/XU/CN
*	6	Badge	CAH1919	CAH1919	CAH1916	CAH1916
	9	Panel	CNB3111	CNB3111	CNB3053	CNB3053
	10	Panel	CNB3123	CNB3056	CNB3055	CNB3055
	11	Heat Sink	CNR1788	CNR1788	CNR1764	CNR1764
	13	Amp Unit	CWH1267	CWH1268	CWH1268	CWH1268
	16	Pin Jack(CN111)	CKB1069	CKB1068	CKB1068	CKB1068
	17	Terminal(CN853)	CKE1054	CKE1055	CKE1055	CKE1055
	18	Terminal(CN855)	CKE1056	CKE1057	CKE1057	CKE1057
	19	Terminal(CN856)	CKE1056	CKE1057	CKE1057	CKE1057
	41	Screw	Not used	Not used	Not used	Not used
*	42	Seal	Not used	Not used	Not used	Not used
	43	Holder	Not used	Not used	Not used	Not used
	44	Nut	Not used	Not used	Not used	Not used
	45	Washer	Not used	Not used	Not used	Not used

Mark	No.	Description	Part No. GM-510T/XU/UC
*	6	Badge	CAH1919
	9	Panel	CNB3111
	10	Panel	CNB3113
	11	Heat Sink	CNR1797
	13	Amp Unit	CWH1268
	16	Pin Jack(CN111)	CKB1068
	17	Terminal(CN853)	CKE1055
	18	Terminal(CN855)	CKE1057
	19	Terminal(CN856)	CKE1057
	41	Screw	BMZ40P200FZK
*	42	Seal	CAN3984
	43	Holder	CNV8522
	44	Nut	NB40FZK
	45	Washer	WB40FZK

A

B

C

D

E

F

3. SCHEMATIC DIAGRAM

3.1 SCHEMATIC DIAGRAM(GUIDE PAGE)

Note: When ordering service parts, be sure to refer to " EXPLODED VIEWS AND PARTS LIST" or "ELECTRICAL PARTS LIST".

A-a

NOTE :

- Symbol indicates a resistor. No differentiation is made between chip resistors and discrete resistors.
- Symbol indicates a capacitor. No differentiation is made between chip capacitors and discrete capacitors.

Decimal points for resistor and capacitor fixed values are expressed as :
2.2→2R2
0.022→R022

The ⚠ mark found on some component parts indica the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

Large size SCH diagram

Guide page

Detailed page

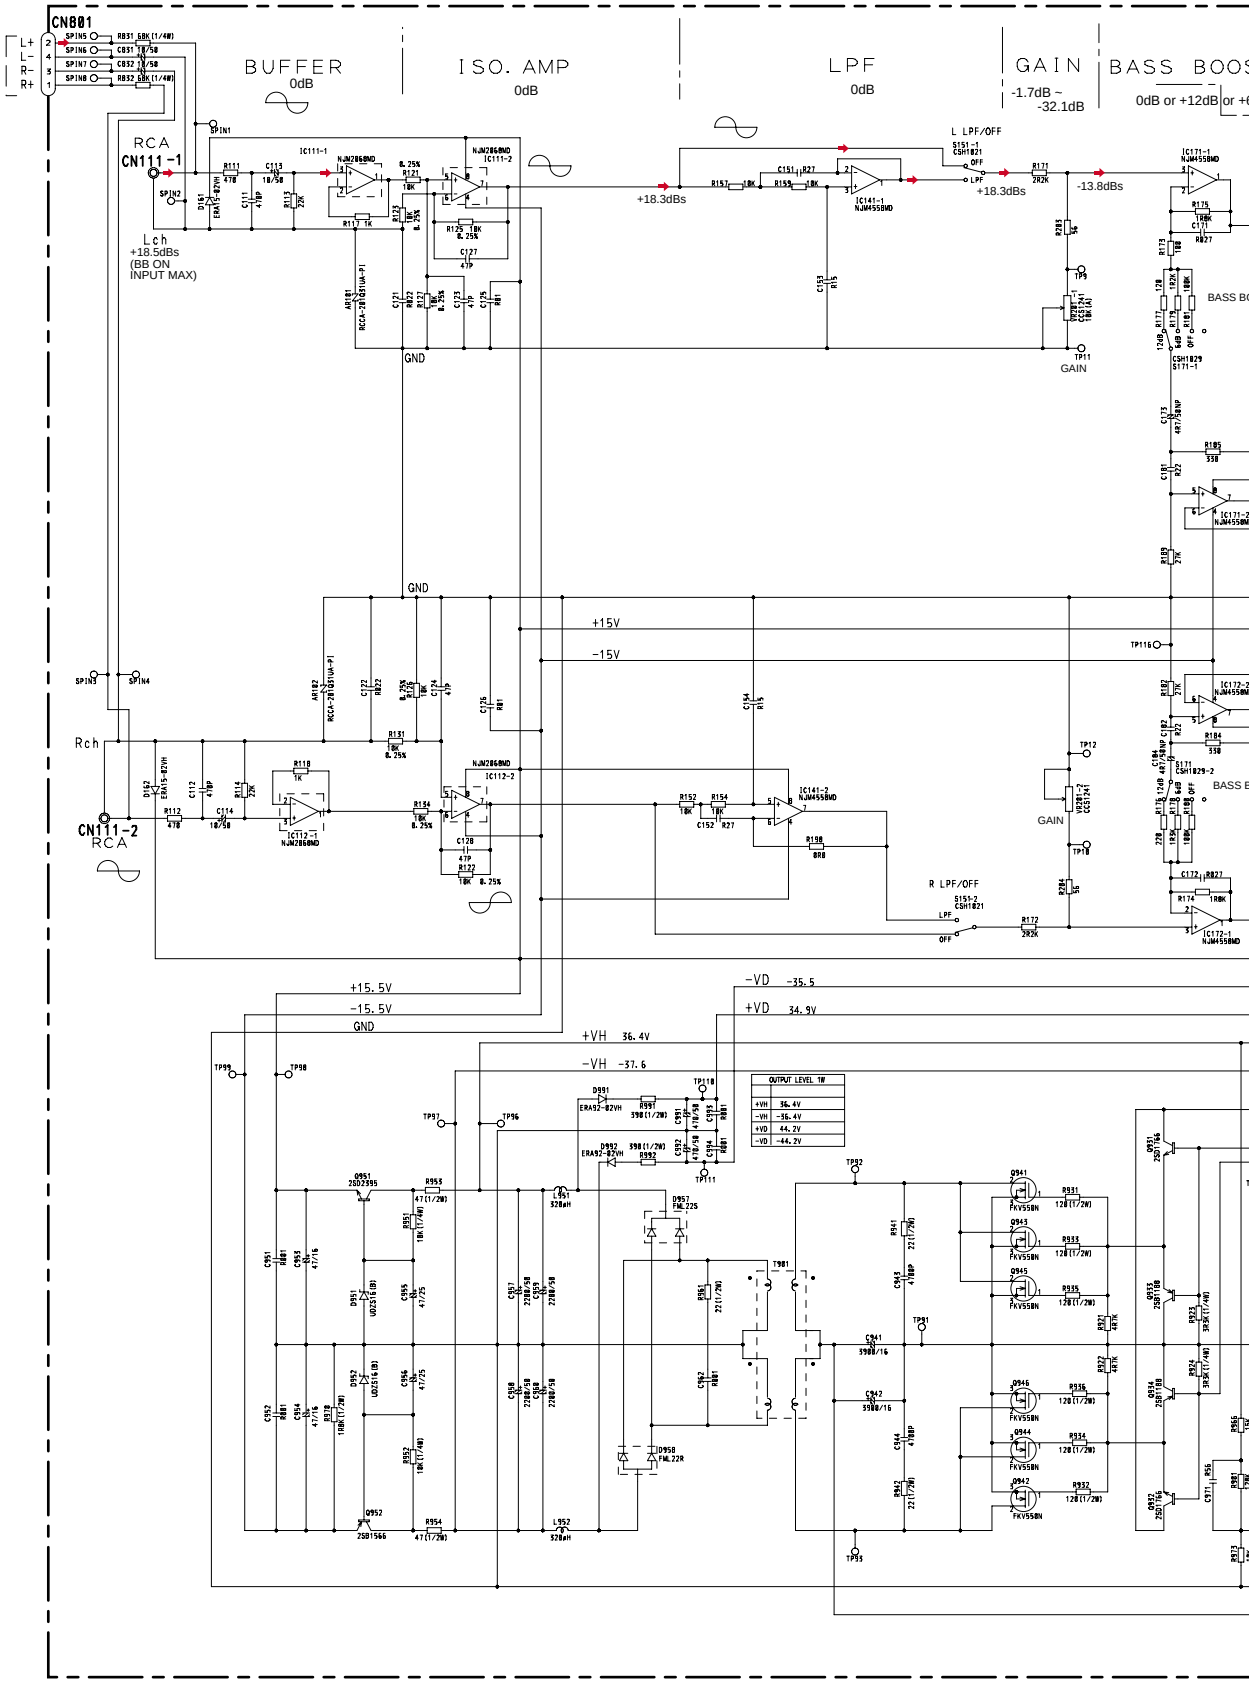

A-b

cates

A AMP UNIT

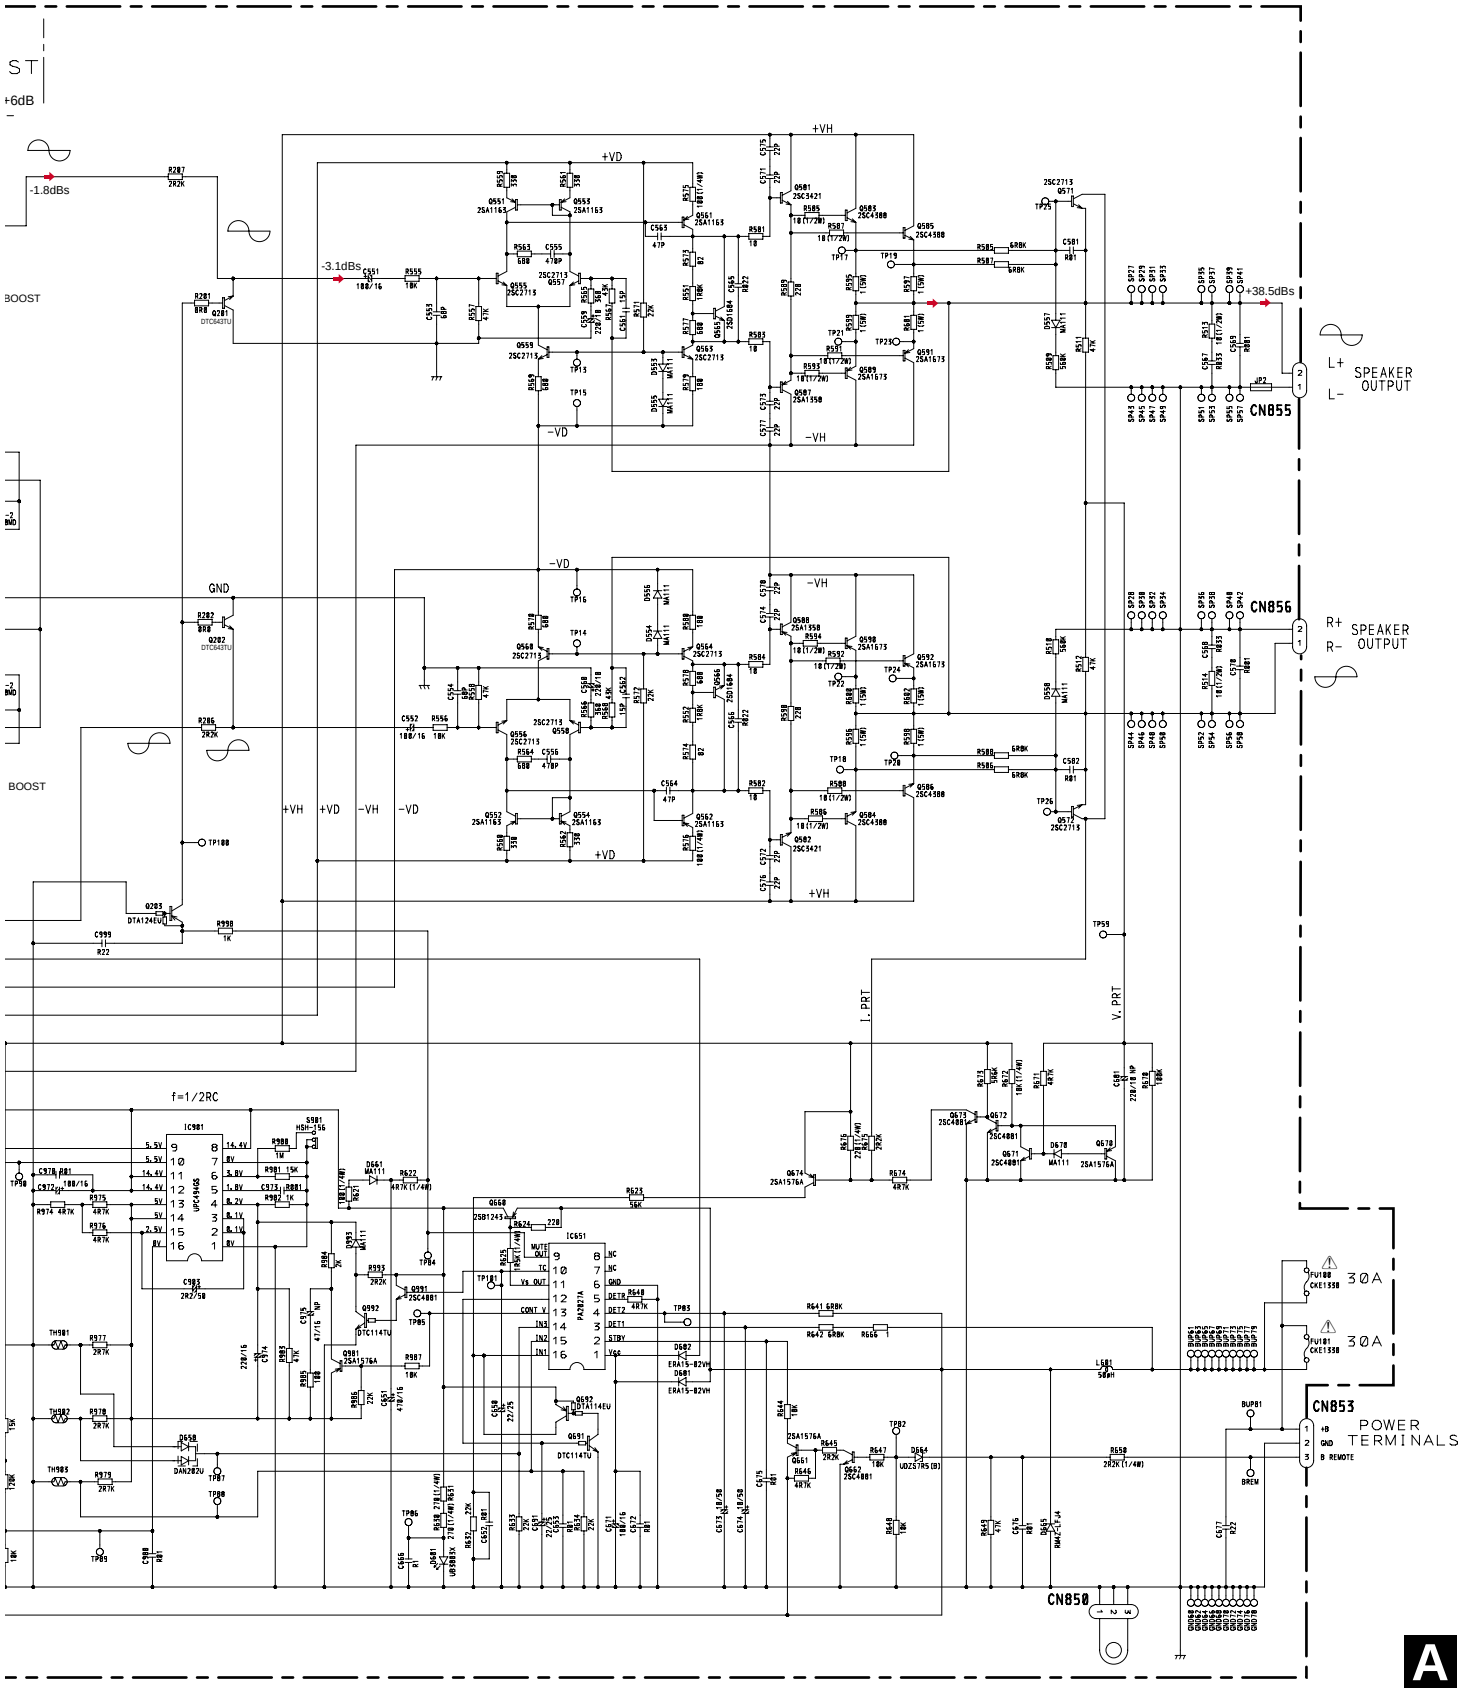

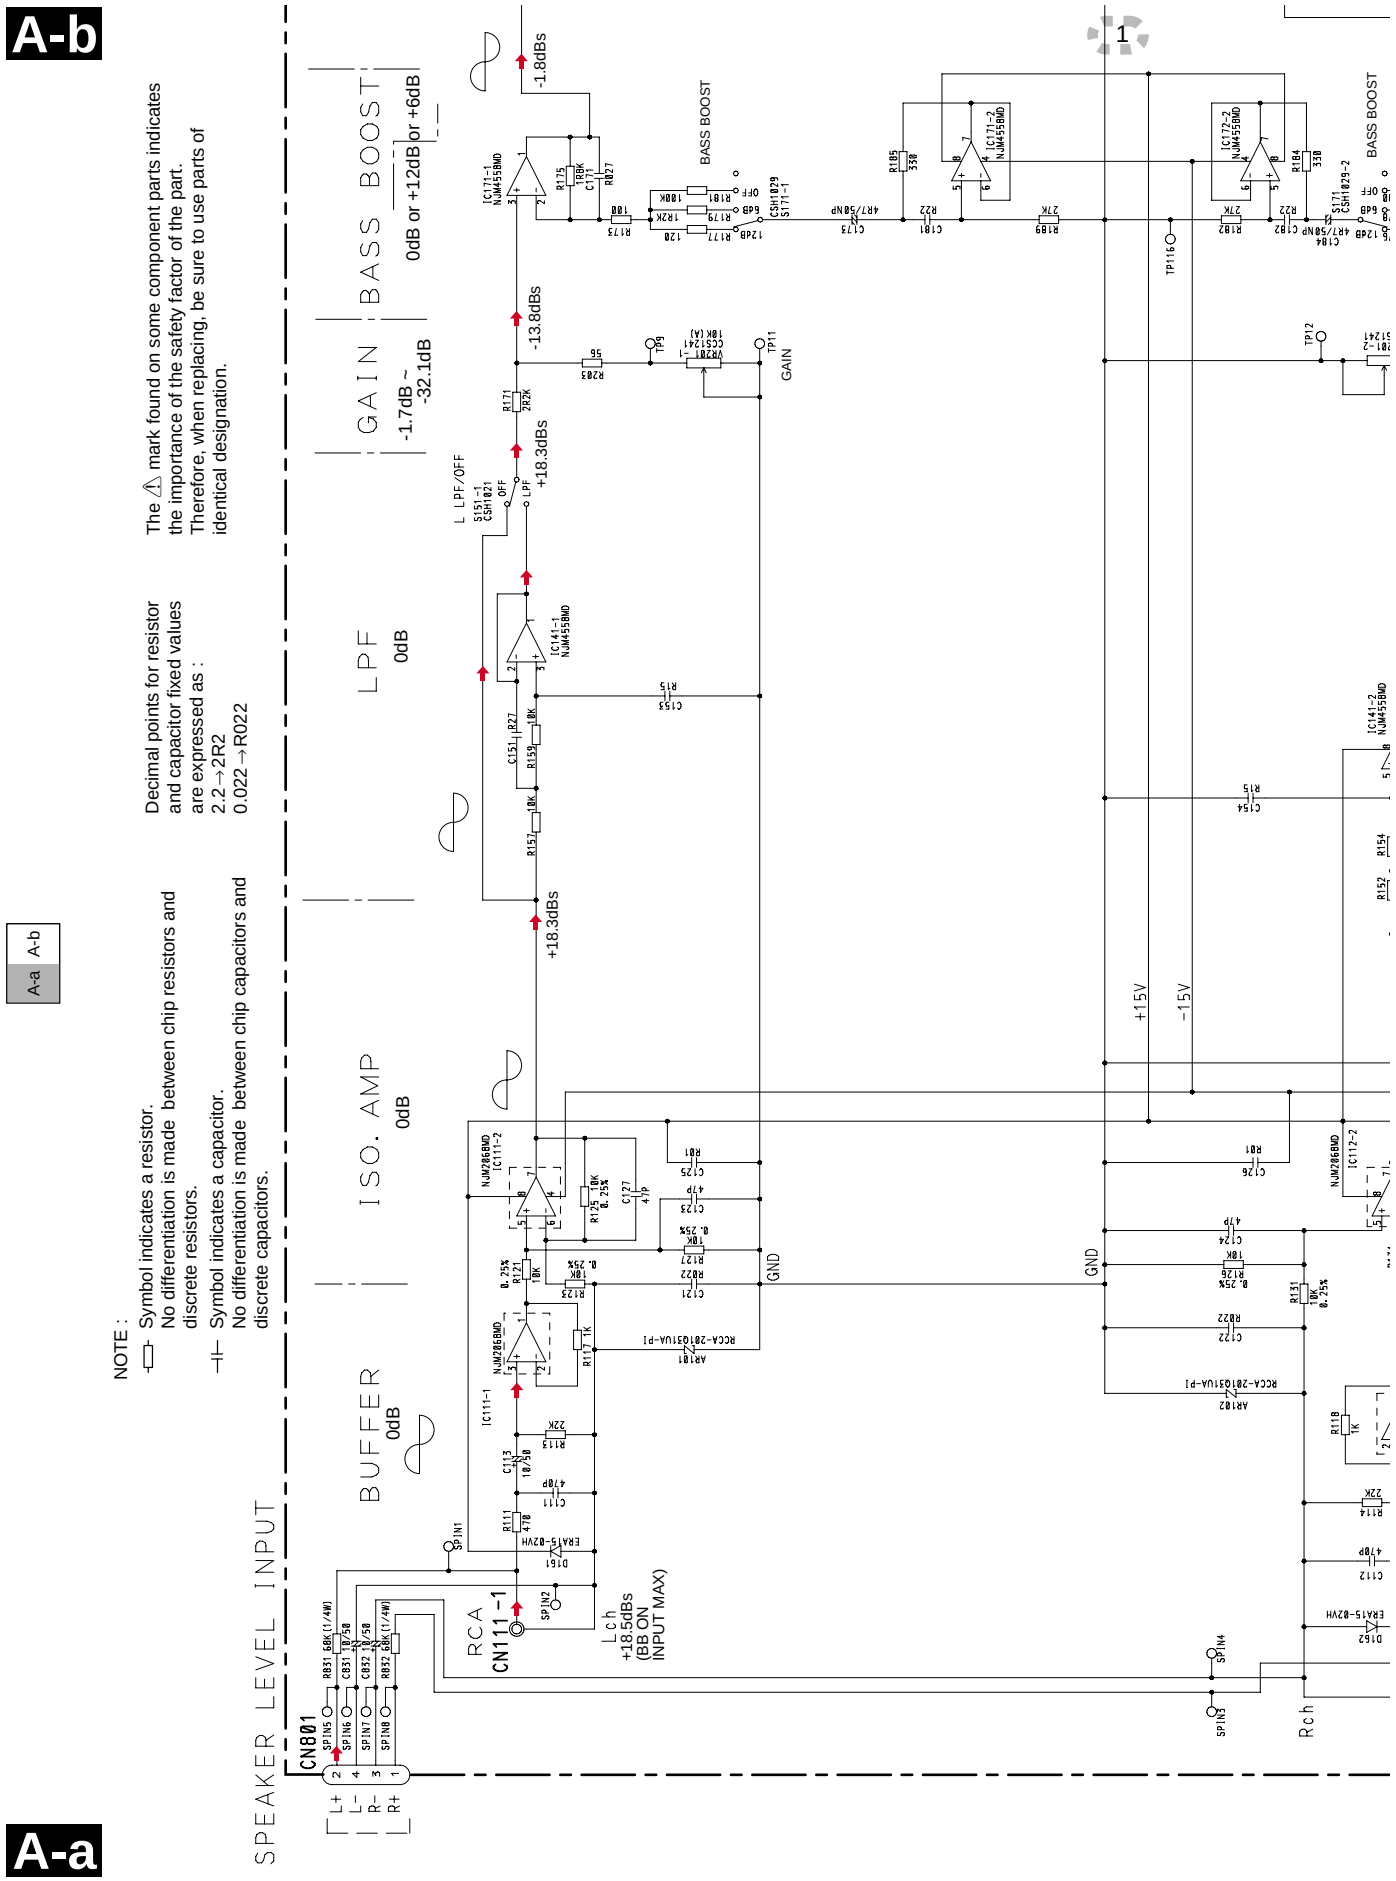

NOTE :

- Symbol indicates a resistor. No differentiation is made between chip resistors and discrete resistors.
- Symbol indicates a capacitor. No differentiation is made between chip capacitors and discrete capacitors.

Decimal points for resistor and capacitor fixed values are expressed as :
2.2→2R2
0.022→R022

The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

A-a A-b

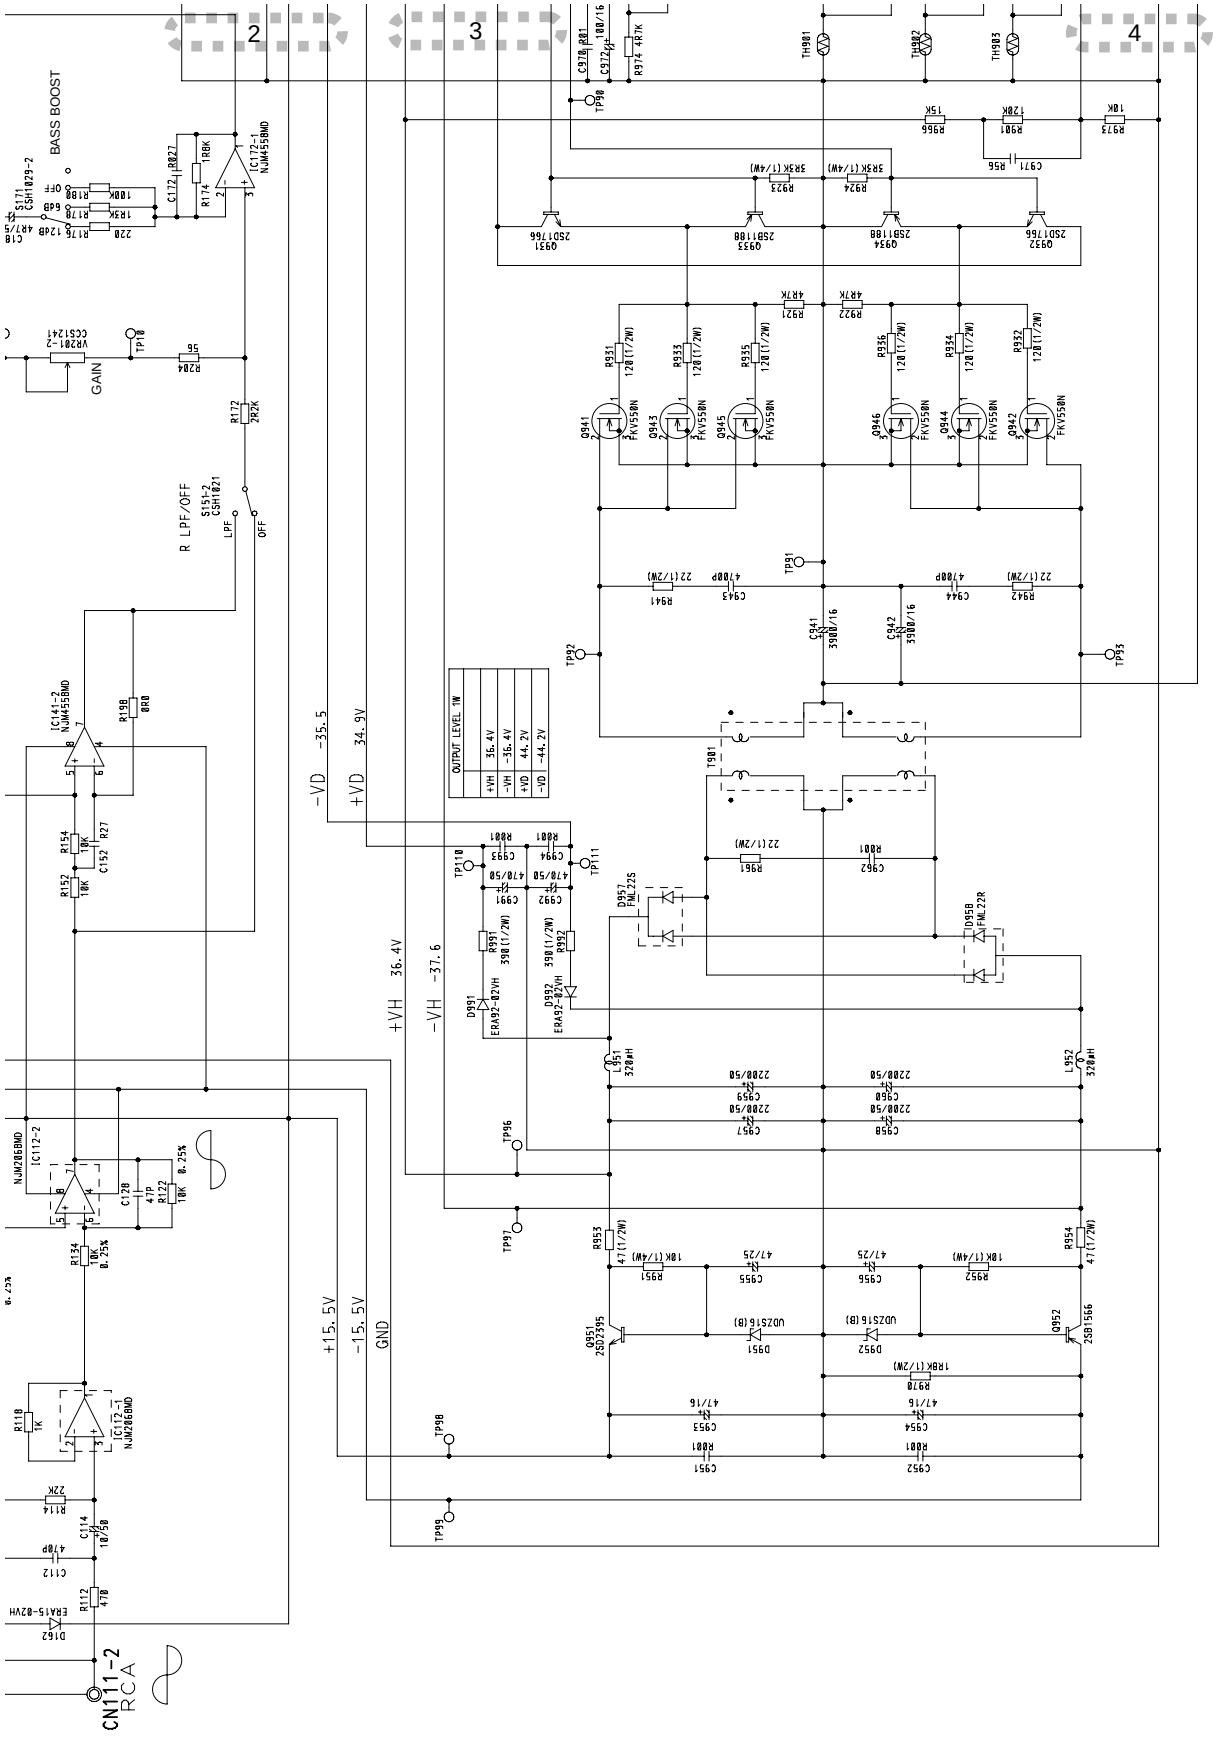
A-b
A-a
BASS BOOST
GAIN
R LPF/OFF
LPF
OFF
CN111-2
RCA
OUTPUT LEVEL 1W
+VH 35.4V
-VH -35.4V
+VD 44.2V
-VD -44.2V
-VD -35.5
+VD 34.9V
+VH 36.4V
-VH -37.6
+15.5V
-15.5V
GND

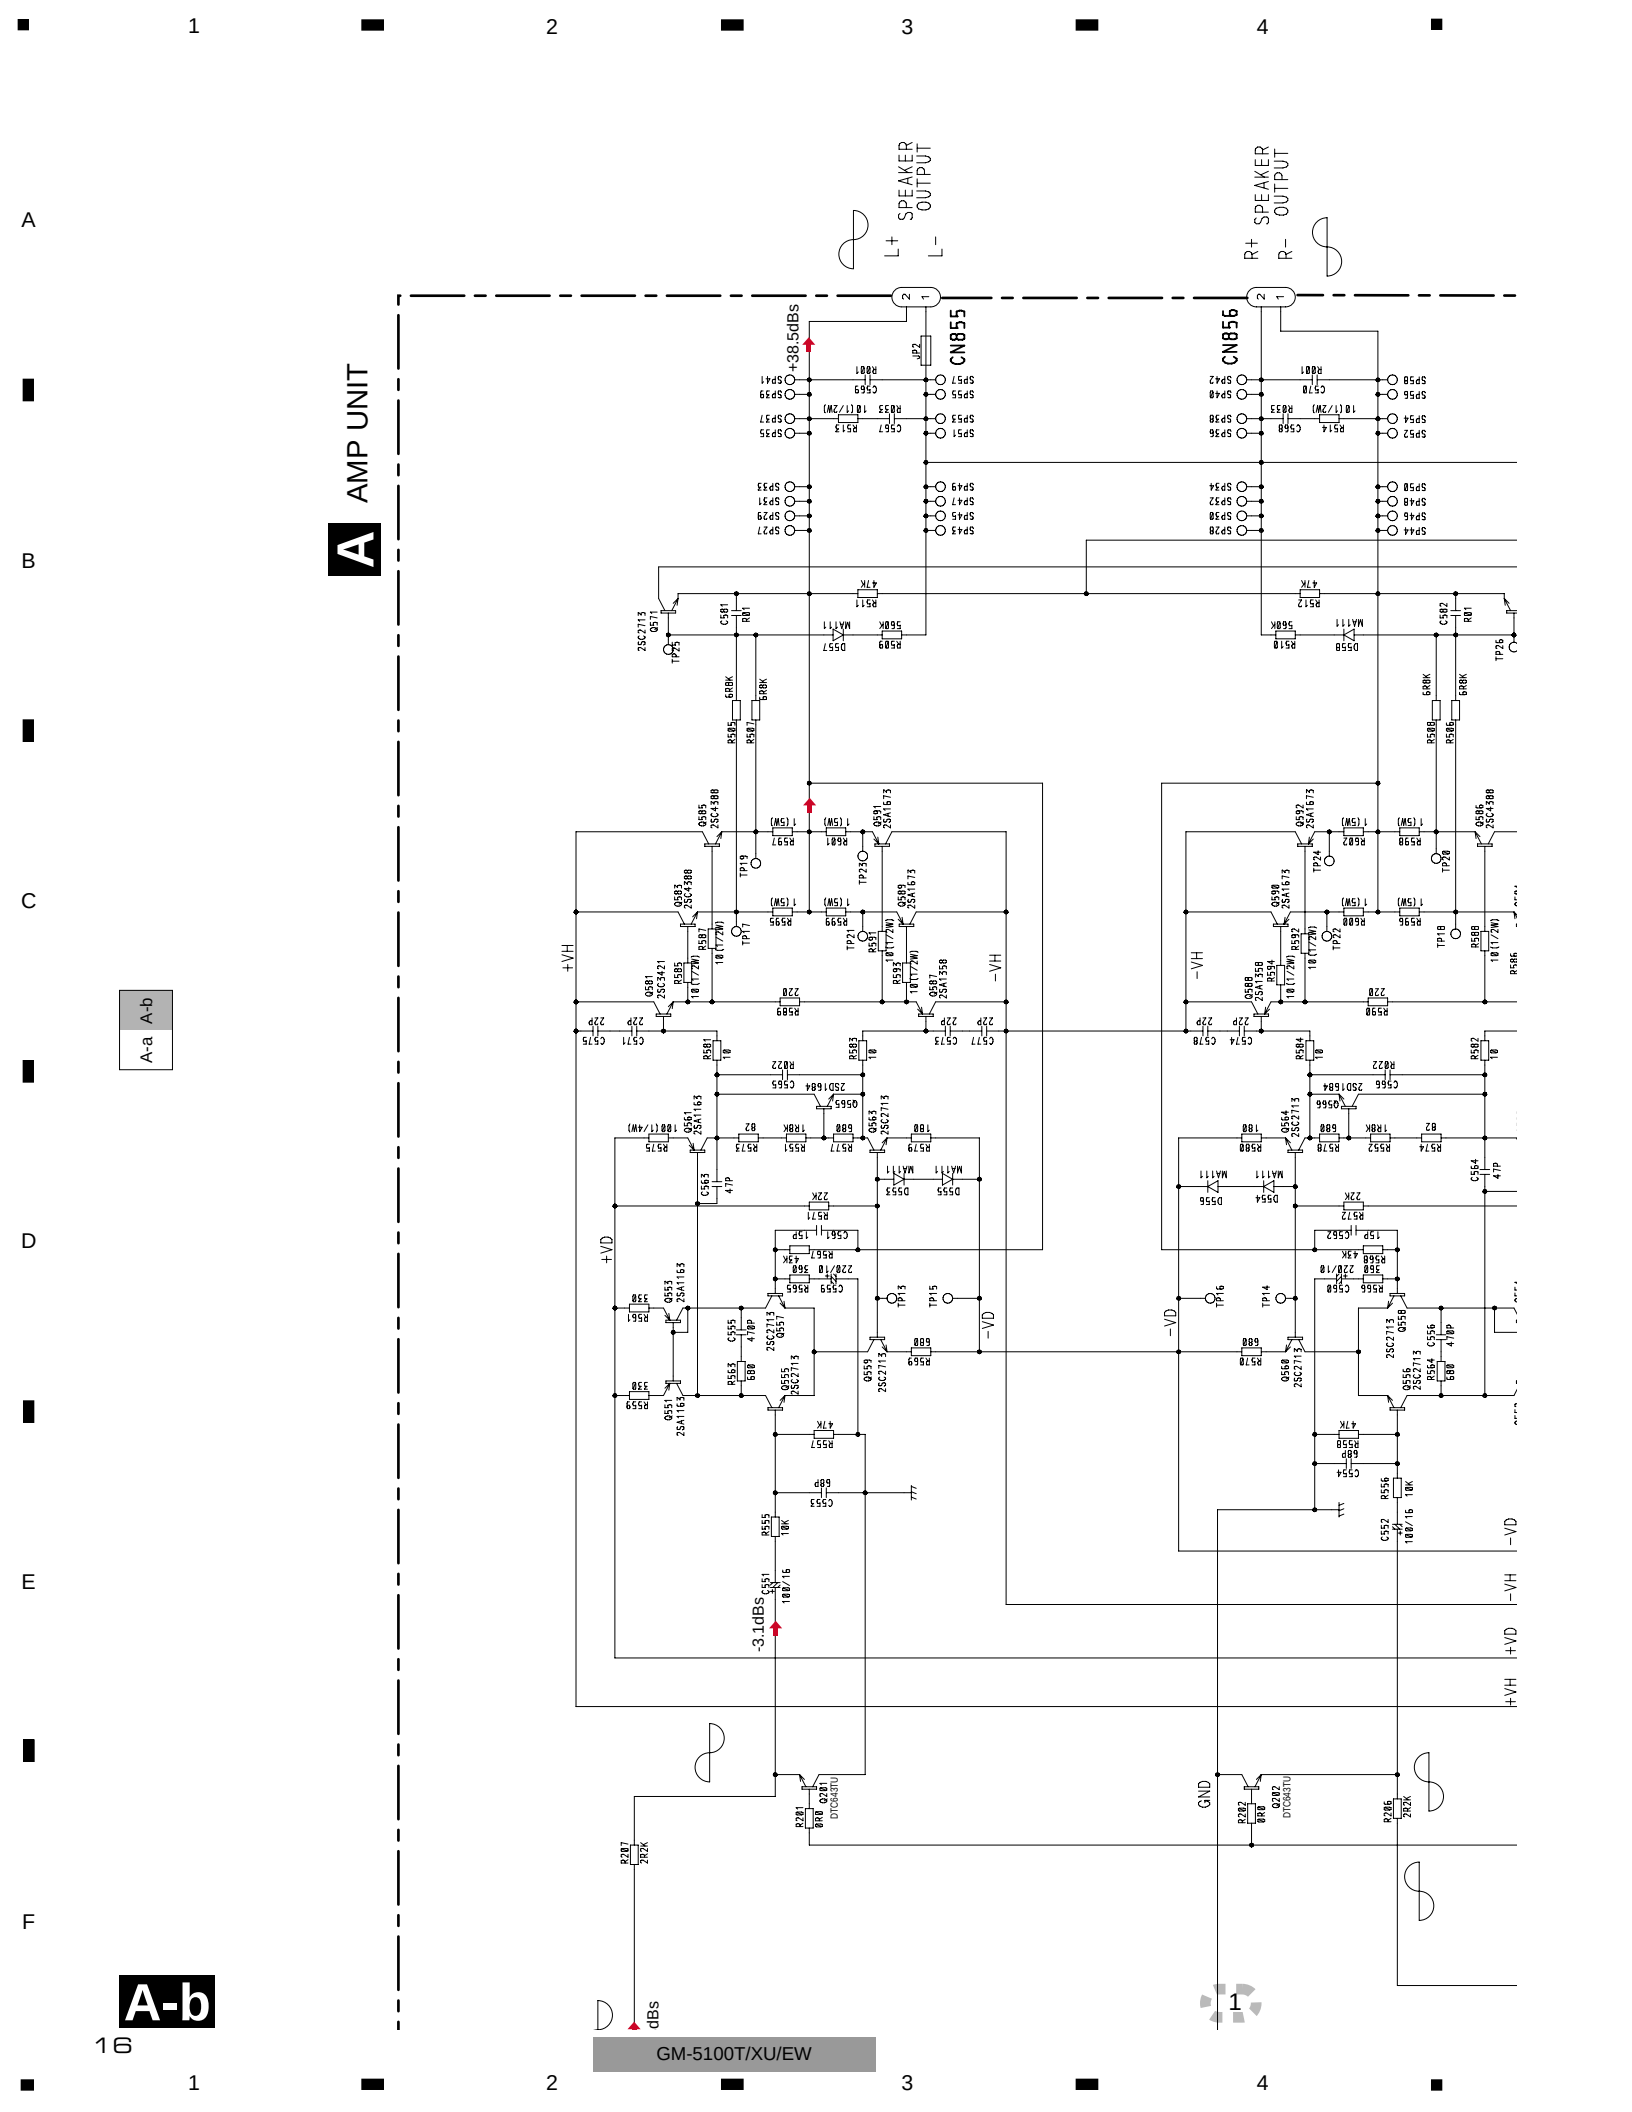
A AMP UNIT
L+ SPEAKER OUTPUT
L- SPEAKER OUTPUT
R+ SPEAKER OUTPUT
R- SPEAKER OUTPUT
CN855
CN856
+38.5dBs
-3.1dBs
dBs
+VH
-VH
+VD
-VD
GND
A-b
A-a
A-b

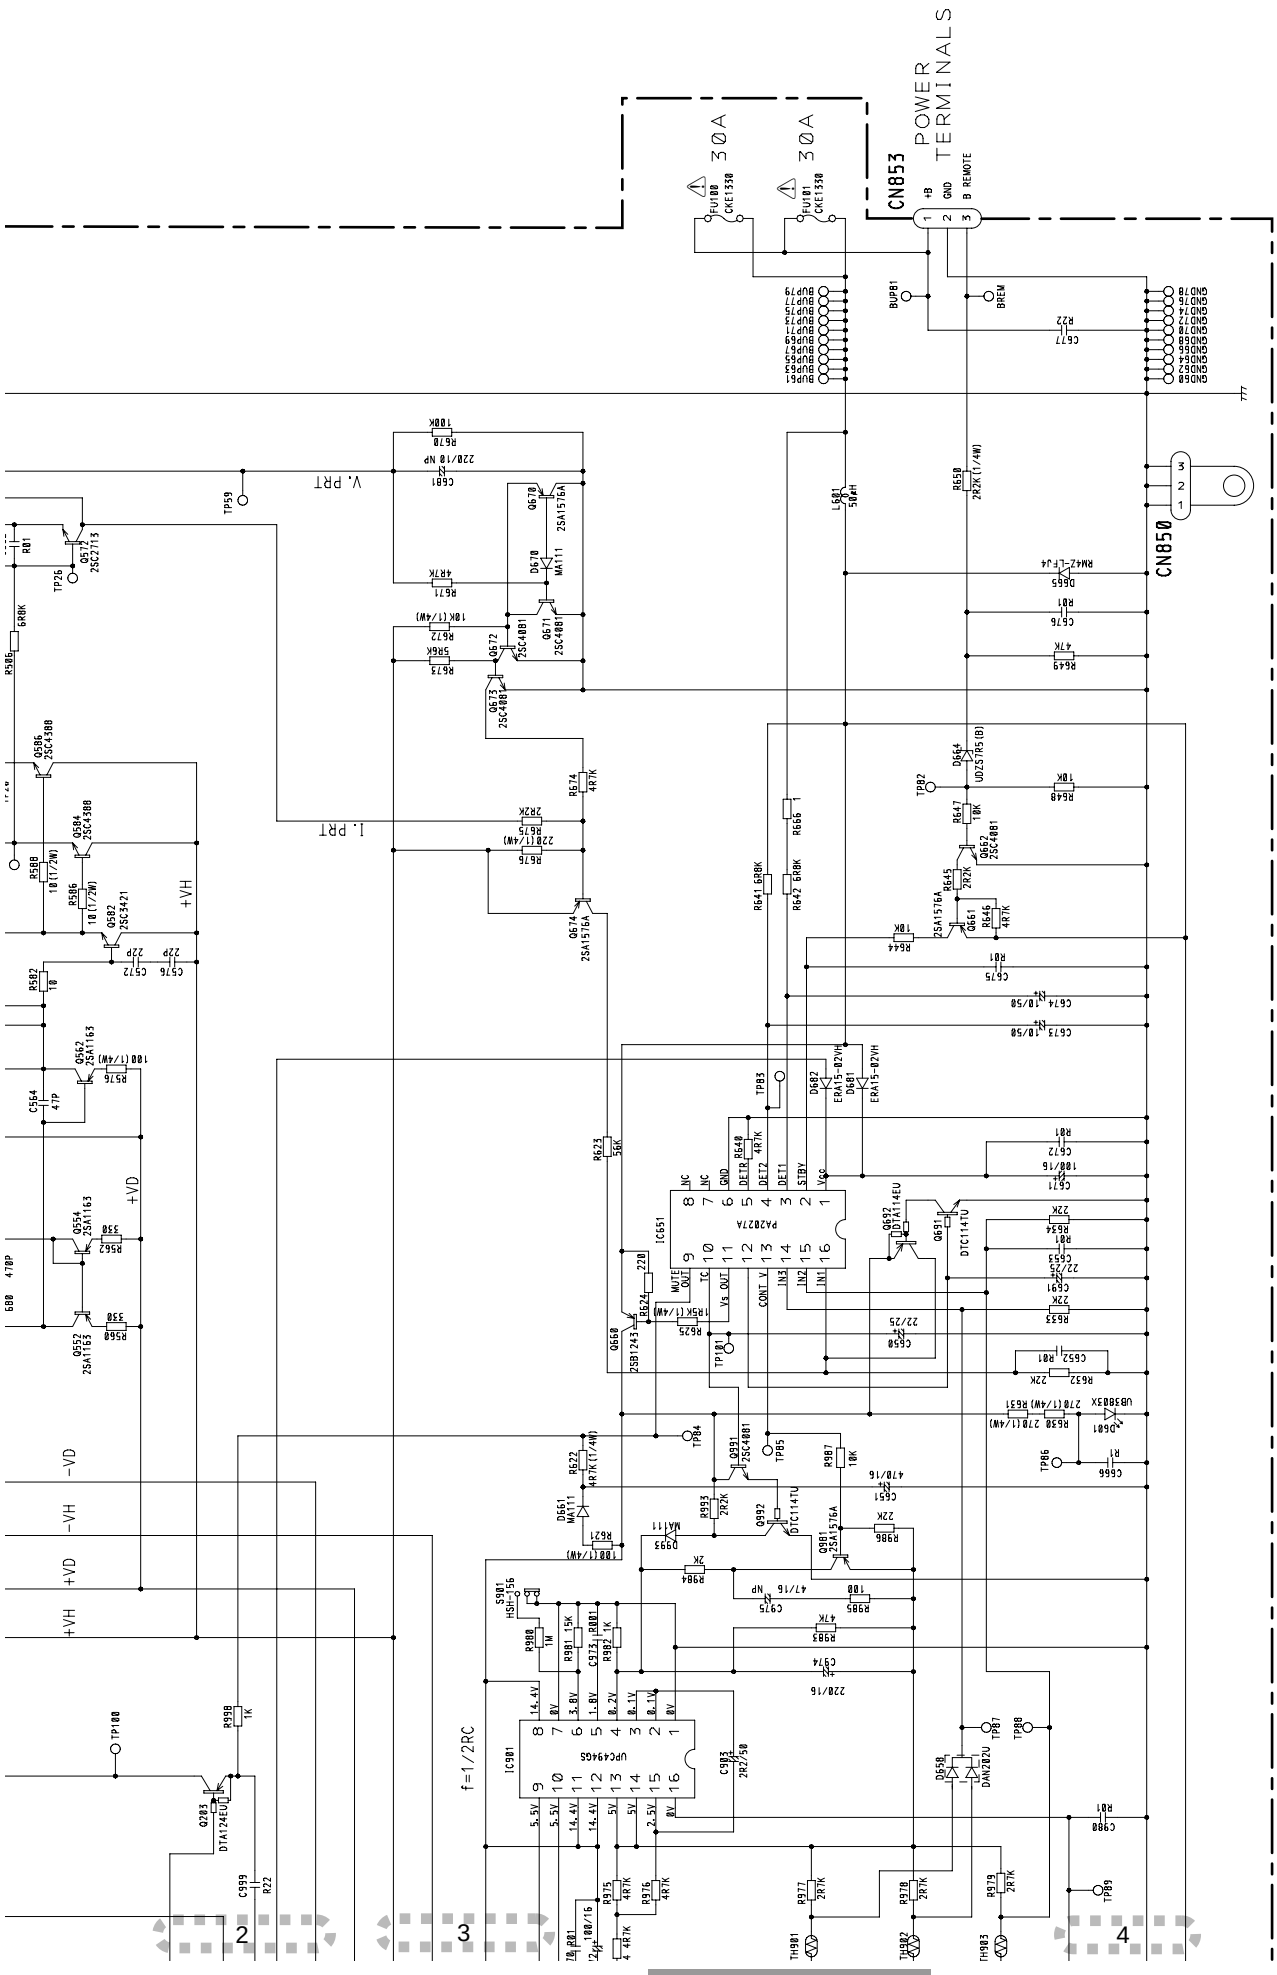
CN853
POWER TERMINALS
+B
GND
B REMOTE
30A
30A
CN850
V. PRT
I. PRT
+VH
+VD
-VD
-VH
f=1/2RC
2
3
4
A-b
A-a
A-b

4. PCB CONNECTION DIAGRAM

4.1 AMP UNIT

NOTE FOR PCB DIAGRAMS

1.The parts mounted on this PCB include all necessary parts for several destination.
For further information for respective destinations, be sure to check with the schematic diagram.

2.Viewpoint of PCB diagrams

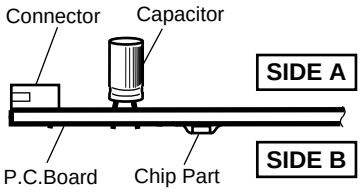

A AMP UNIT

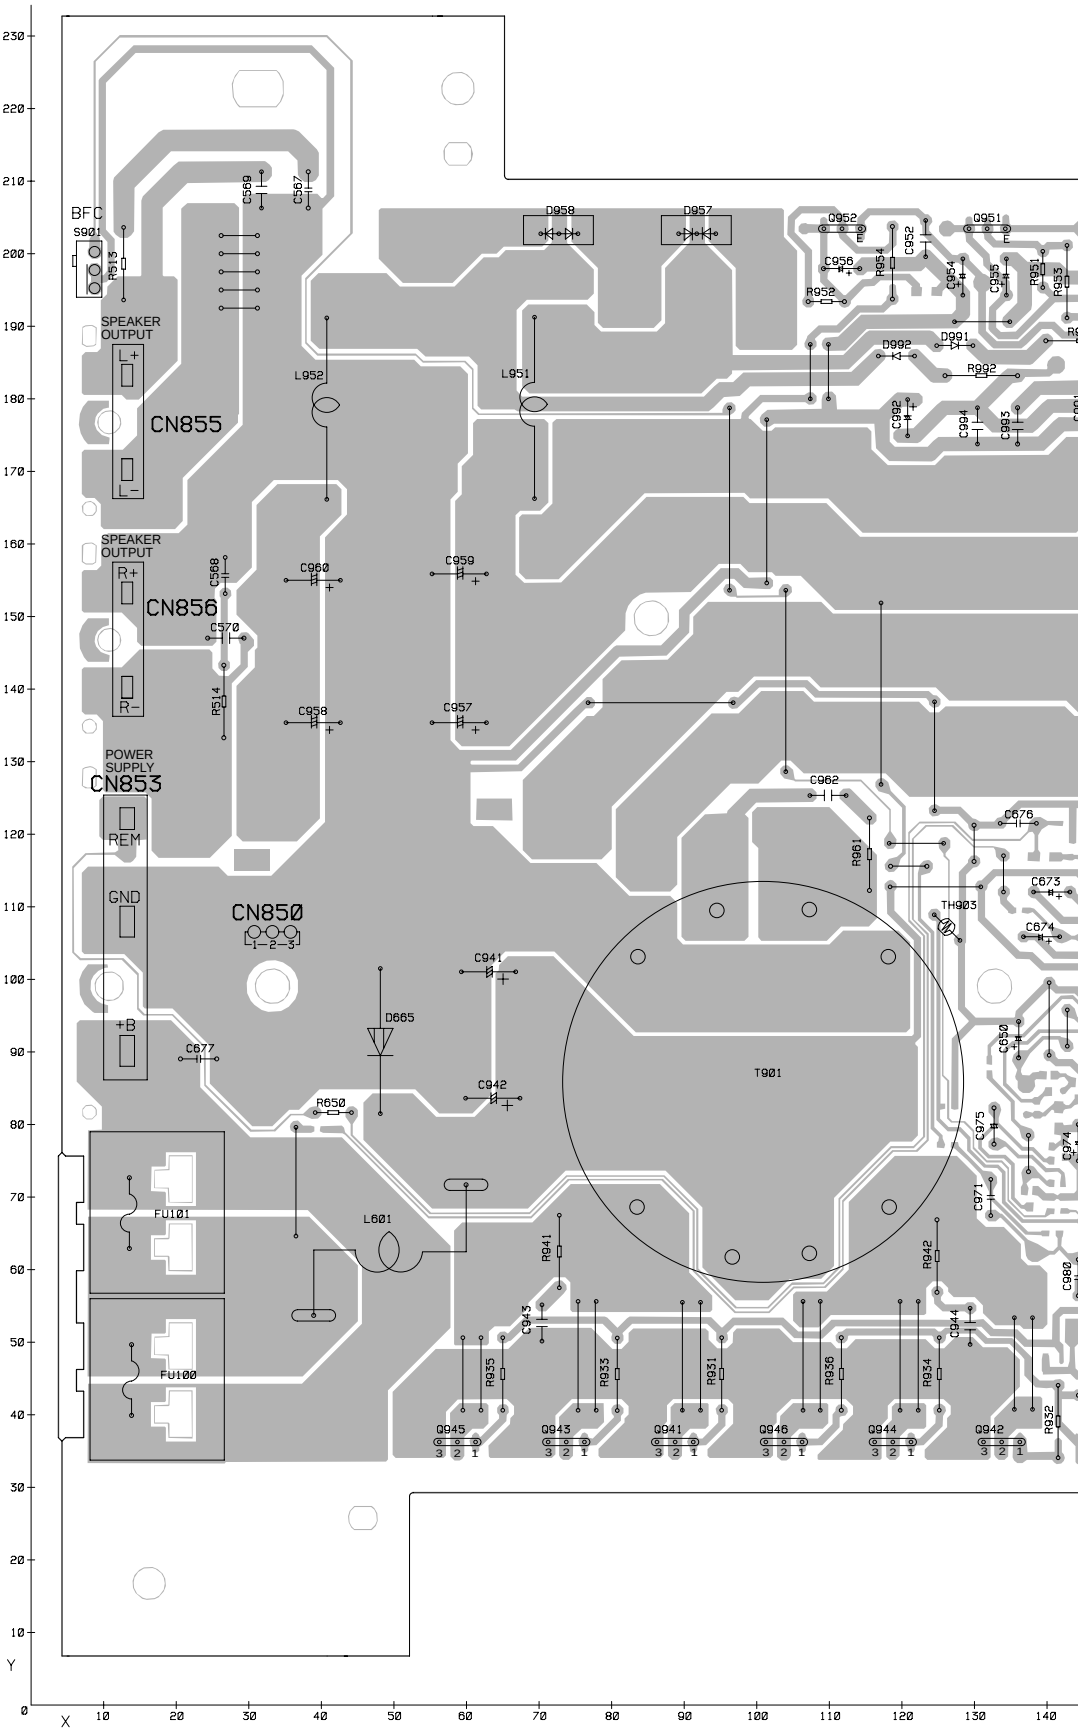

SIDE A

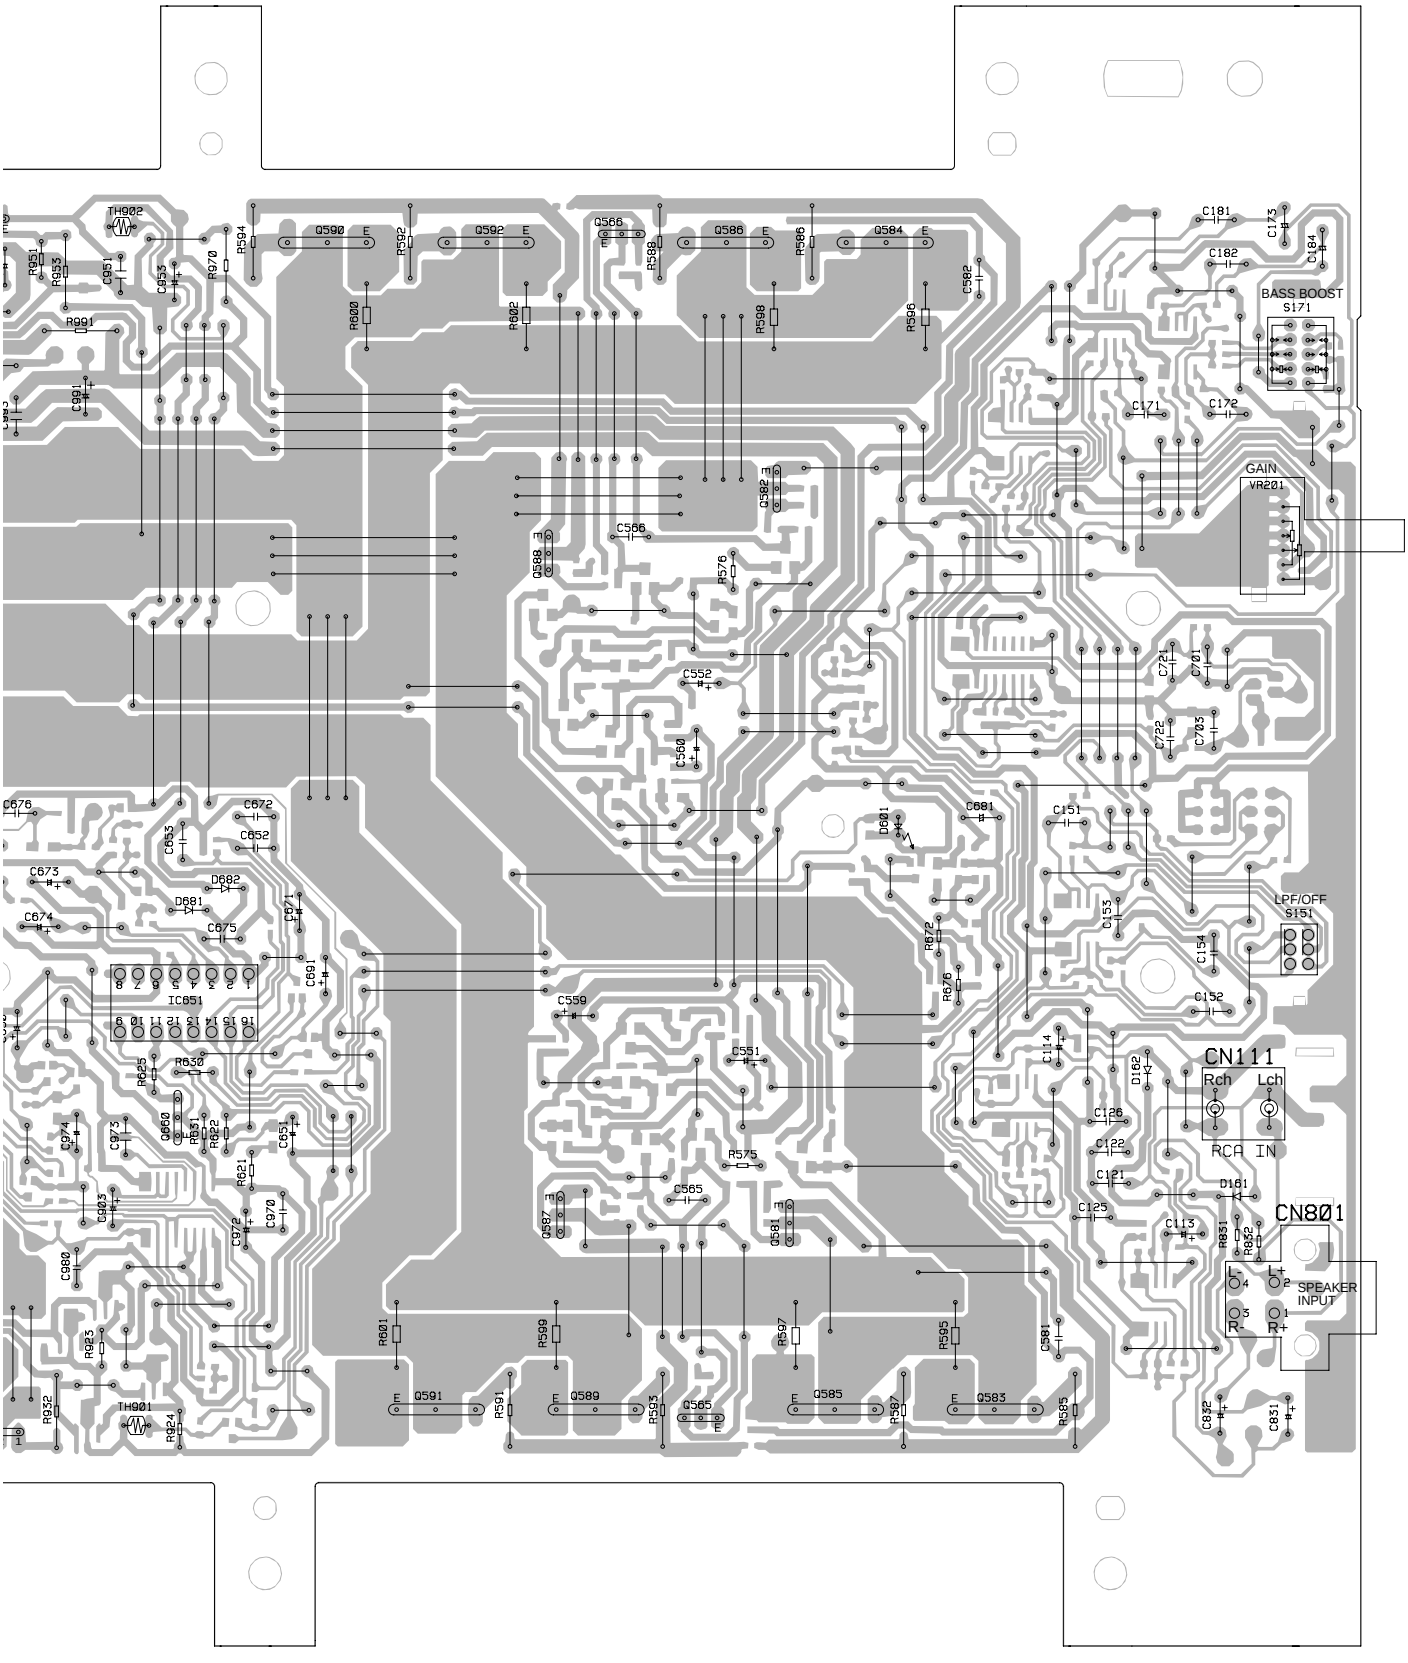
BASS BOOST
S171
GAIN
VR201
LPF/OFF
S151
CN111
Rch
Lch
RCA IN
CN801
SPEAKER
INPUT
IC651

5 6 7 8

A AMP UNIT

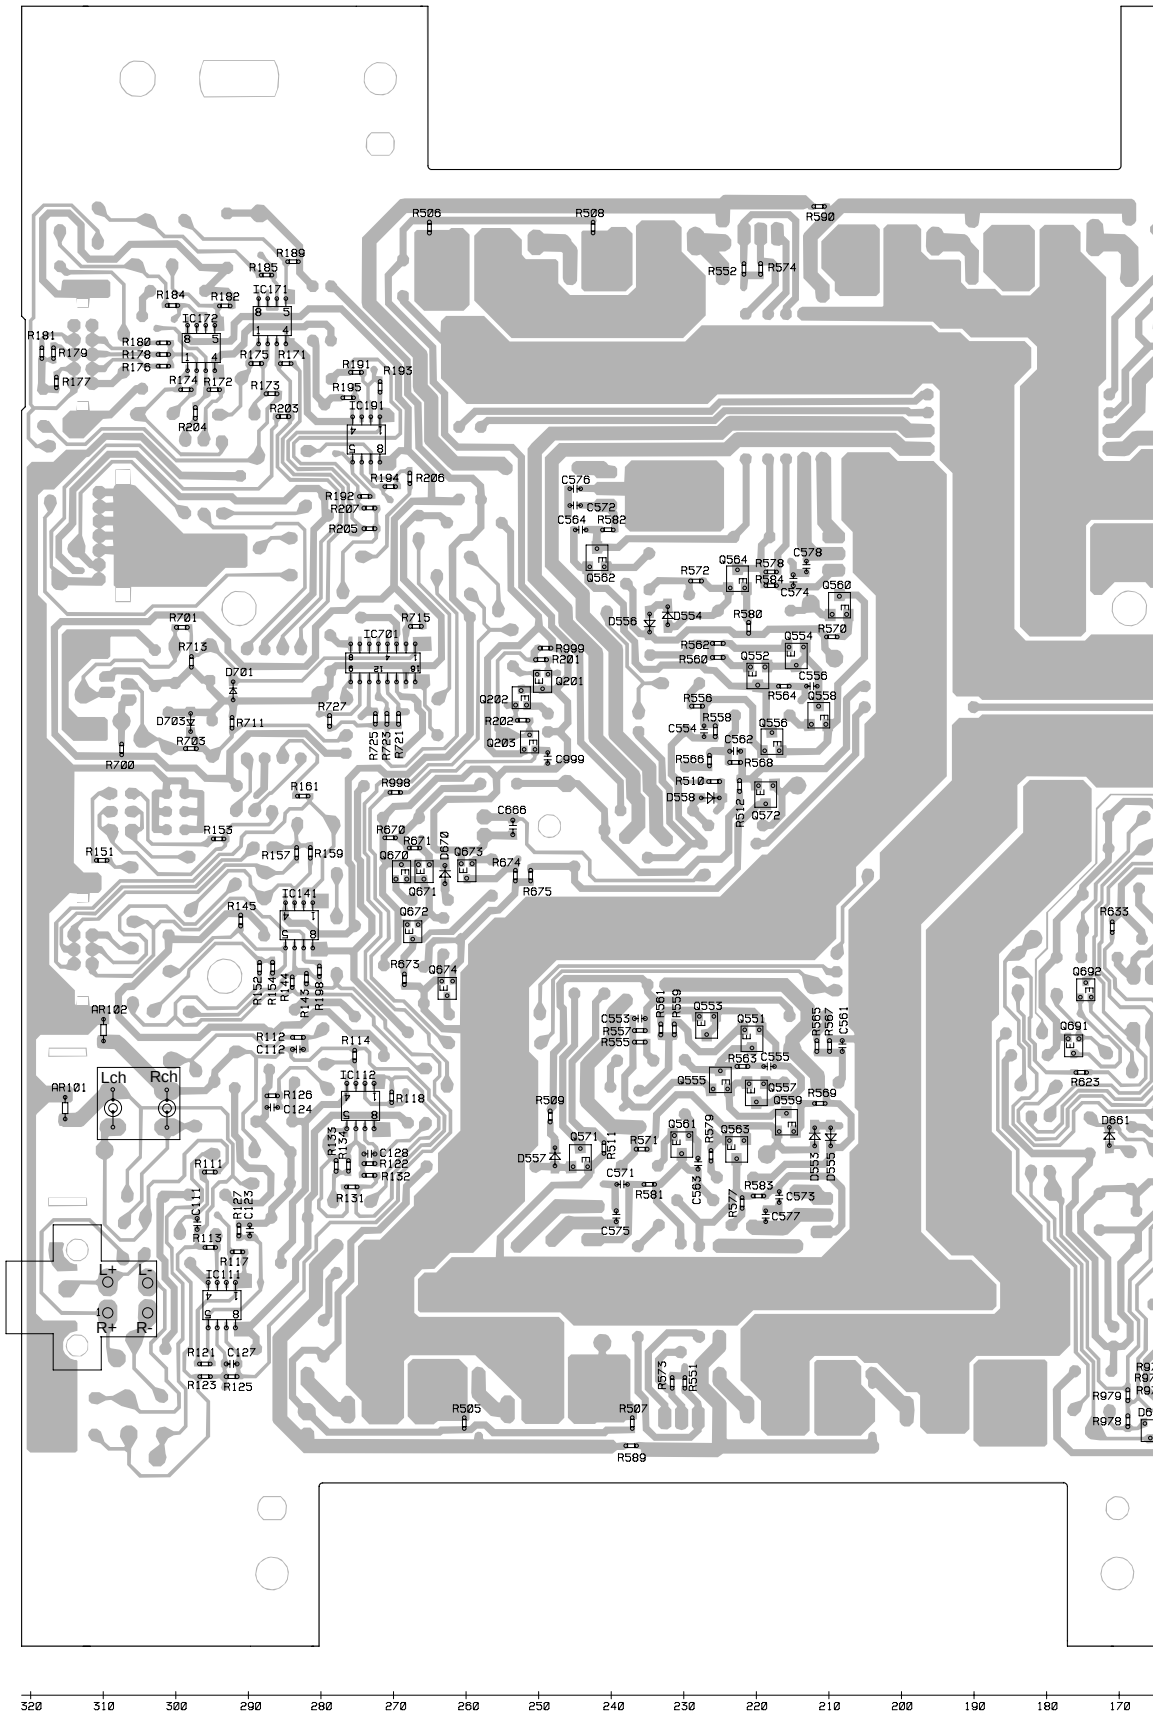
R506
R508
R590
R552
R574
R189
R185
IC171
R104
R182
IC172
R181
R180
R178
R176
R179
R177
R175
R171
R174
R172
R173
R203
R204
R191
R193
R195
IC191
R194
R206
R192
R207
R205
C576
C572
C564
R582
C562
R572
Q564
R578
R584
C578
C574
Q560
D556
D554
R580
R570
R562
R560
Q554
Q552
C556
R556
R564
Q558
R558
C554
C562
Q556
R566
R568
R510
D558
R512
C572
R701
R715
IC701
D701
R727
D703
R711
R703
R700
R725
R723
R721
R999
R201
Q201
Q202
R202
Q203
C999
R998
C666
R161
R155
R151
R157
R159
R670
R671
D670
Q670
Q671
Q673
R674
R675
Q672
IC141
R145
R673
Q674
R152
R154
R143
R138
AR102
R112
C112
R114
IC112
AR101
Lch
Rch
R126
C124
R118
R135
R134
C128
R122
R132
R131
R111
C111
R127
C123
R113
R117
IC111
L+
L-
R+
R-
R121
C127
R123
R125
R505
R507
R589
R509
D557
Q571
R571
C571
R581
C575
Q561
R579
Q563
C563
R577
R583
C573
C577
D553
D555
Q553
R561
R559
C553
R557
R555
Q551
R565
R567
C561
R563
C555
Q555
Q557
Q559
R569
R633
Q692
Q691
R623
D681
R573
R551
R979
R978

SIDE B

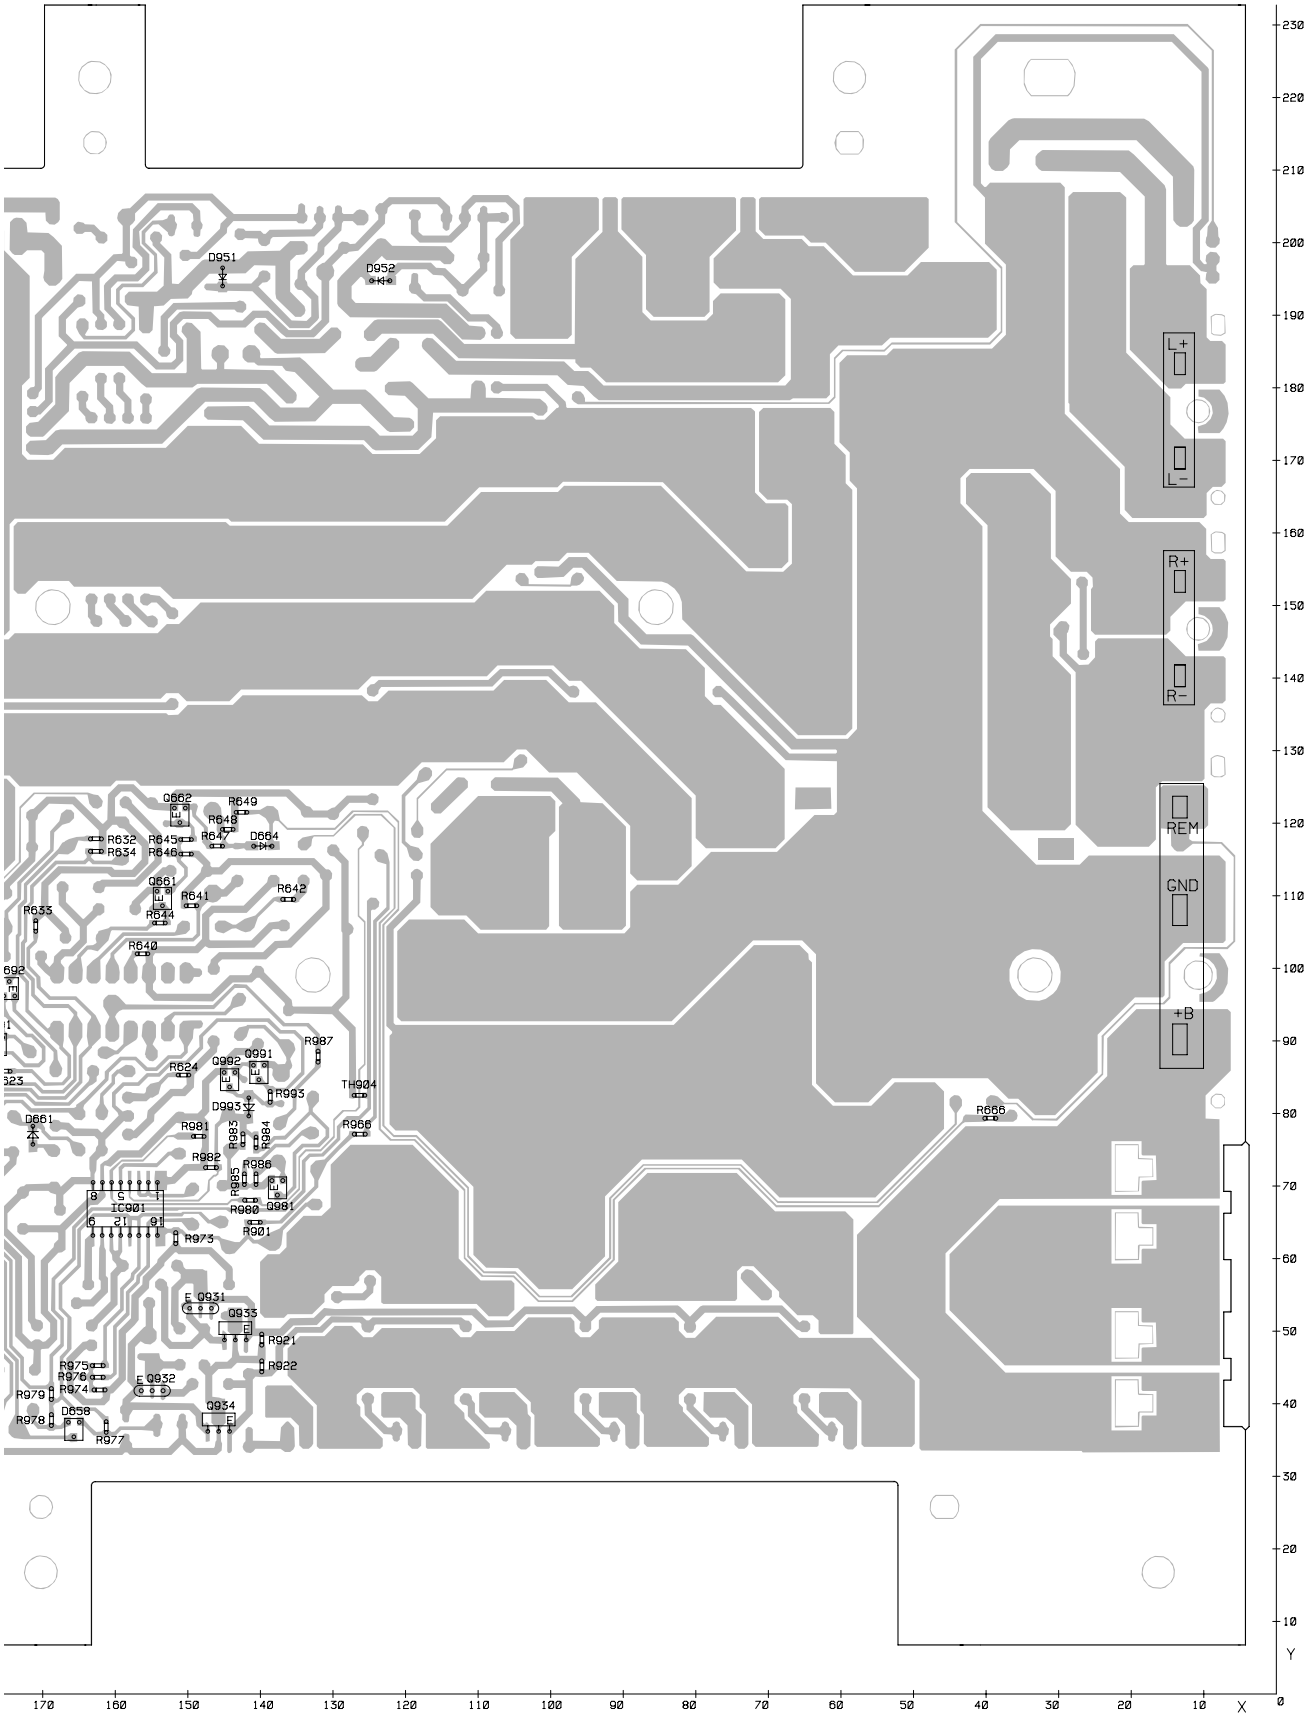
D951
D952
L+
L-
R+
R-
REM
GND
+B
Q662
R649
R648
R647
R632
R634
R645
R646
D664
Q661
R641
R642
R644
R633
R640
R987
R624
Q992
Q991
R993
TH904
D993
R981
R983
R984
R982
R985
R986
R980
Q981
R901
IC901
R973
D661
R666
R966
E Q931
Q933
R921
R922
R975
R976
R974
E Q932
R979
R978
D658
R977
Q934
230 220 210 200 190 180 170 160 150 140 130 120 110 100 90 80 70 60 50 40 30 20 10 0 Y
170 160 150 140 130 120 110 100 90 80 70 60 50 40 30 20 10 X

5. ELECTRICAL PARTS LIST

NOTE:
- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*
  Chip Resistor
  RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J
  Chip Capacitor (except for CQS.....)
  CKS....., CCS....., CSZS.....
- *The ⚠ mark found on some component parts indicatesthe importance of the safety factor of the part.*
- *Therefore, when replacing, be sure to use parts of identical designation.*

Meaning of the figures and others in the parentheses in the parts list.
Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.
IC 301 (A, 91, 111) IC NJM2068V

A Unit Number : CWH1267(EW)
Unit Number : CWH1268(UC,ES,CN)
Unit Name : Amp Unit

MISCELLANEOUS

=====Circuit Symbol and No.		===Part Name	Part No.
IC	111	(B,294,54) IC	NJM2068MD
IC	112	(B,275,81) IC	NJM2068MD
IC	141	(B,283,106) IC	NJM4558MD
IC	171	(B,287,189) IC	NJM4558MD
IC	172	(B,297,186) IC	NJM4558MD
IC	651	(A,168,99) IC	PA2027A
IC	901	(B,159,67) IC	UPC494GS
Q	201	(B,249,140) Transistor	DTC643TU
Q	202	(B,252,137) Transistor	DTC643TU
Q	203	(B,251,131) Transistor	DTA124EU
Q	551	(B,221,90) Transistor	2SA1163
Q	552	(B,220,140) Transistor	2SA1163
Q	553	(B,227,92) Transistor	2SA1163
Q	554	(B,215,143) Transistor	2SA1163
Q	555	(B,225,85) Transistor	2SC2713
Q	556	(B,218,131) Transistor	2SC2713
Q	557	(B,220,83) Transistor	2SC2713
Q	558	(B,211,135) Transistor	2SC2713
Q	559	(B,216,79) Transistor	2SC2713
Q	560	(B,209,150) Transistor	2SC2713
Q	561	(B,230,76) Transistor	2SA1163
Q	562	(B,242,157) Transistor	2SA1163
Q	563	(B,223,75) Transistor	2SC2713
Q	564	(B,223,154) Transistor	2SC2713
Q	565	(A,230,38) Transistor	2SD1684
Q	566	(A,219,201) Transistor	2SD1684
Q	571	(B,244,74) Transistor	2SC2713
Q	572	(B,219,124) Transistor	2SC2713
Q	581	(A,243,65) Transistor	2SC3421
Q	582	(A,241,166) Transistor	2SC3421
Q	583	(A,276,39) Transistor	2SC4388
Q	584	(A,250,200) Transistor	2SC4388
Q	585	(A,254,39) Transistor	2SC4388
Q	586	(A,228,200) Transistor	2SC4388
Q	587	(A,211,66) Transistor	2SA1358
Q	588	(A,209,157) Transistor	2SA1358
Q	589	(A,221,39) Transistor	2SA1673
Q	590	(A,173,200) Transistor	2SA1673
Q	591	(A,199,39) Transistor	2SA1673
Q	592	(A,195,200) Transistor	2SA1673
Q	660	(A,158,77) Transistor	2SB1243
Q	661	(B,154,110) Transistor	2SA1576A
Q	662	(B,151,121) Transistor	2SC4081
Q	670	(B,269,113) Transistor	2SA1576A
Q	671	(B,266,113) Transistor	2SC4081

=====Circuit Symbol and No.		===Part Name	Part No.
Q	672	(B,267,105) Transistor	2SC4081
Q	673	(B,260,114) Transistor	2SC4081
Q	674	(B,263,97) Transistor	2SA1576A
Q	691	(B,176,89) Transistor	DTC114TU
Q	692	(B,175,97) Transistor	DTA114EU
Q	931	(B,148,55) Transistor	2SD1766
Q	932	(B,155,44) Transistor	2SD1766
Q	933	(B,143,50) Transistor	2SB1188
Q	934	(B,146,38) Transistor	2SB1188
Q	941	(A,91,36) Transistor	FKV550N
Q	942	(A,136,36) Transistor	FKV550N
Q	943	(A,76,36) Transistor	FKV550N
Q	944	(A,121,36) Transistor	FKV550N
Q	945	(A,61,36) Transistor	FKV550N
Q	946	(A,106,36) Transistor	FKV550N
Q	951	(A,129,203) Transistor	2SD2395
Q	952	(A,109,203) Transistor	2SB1566
Q	981	(B,138,70) Transistor	2SA1576A
Q	991	(B,140,86) Transistor	2SC4081
Q	992	(B,144,85) Transistor	DTC114TU
D	161	(A,307,69) Diode	ERA15-02VH
D	162	(A,292,89) Diode	ERA15-02VH
D	553	(B,212,77) Diode	MA111
D	554	(B,232,149) Diode	MA111
D	555	(B,210,77) Diode	MA111
D	556	(B,235,148) Diode	MA111
D	557	(B,248,74) Diode	MA111
D	558	(B,226,124) Diode	MA111
D	601	(A,258,121) LED	UB3803X
D	658	(B,166,36) Diode	DAN202U
D	661	(B,171,77) Diode	MA111
D	664	(B,140,117) Diode	UDZS7R5(B)
D	665	(A,48,102) Diode	RM4Z-LFJ4
D	670	(B,263,113) Diode	MA111
D	681	(A,157,108) Diode	ERA15-02VH
D	682	(A,162,111) Diode	ERA15-02VH
D	951	(B,145,195) Diode	UDZS16(B)
D	952	(B,123,195) Diode	UDZS16(B)
D	957	(A,89,203) Diode	FML22S
D	958	(A,70,203) Diode	FML22R
D	991	(A,125,187) Diode	ERA92-02VH
D	992	(A,122,186) Diode	ERA92-02VH
D	993	(B,142,81) Diode	MA111
L	601	(A,60,72) Choke Coil 50µH	CTH1323
L	951	(A,69,166) Choke Coil 320µH	CTH1326
L	952	(A,41,166) Choke Coil 320µH	CTH1326
T	901	(A,101,86) Transformer	CTT1122
TH	901	(A,151,37) Thermistor	CCX1013
TH	902	(A,149,202) Thermistor	CCX1013
TH	903	(A,128,105) Thermistor	CCX1064

	=====Circuit Symbol and No.		===Part Name	Part No.		=====Circuit Symbol and No.		===Part Name	Part No.
	S	151	(A,314,101) Switch(LPF/OFF)	CSH1021		R	563	(B,222,87)	RS1/16S681J
	S	171	(A,314,181) Switch(BASS BOOST)	CSH1029		R	564	(B,216,139)	RS1/16S681J
	S	901	(A,9,200) Switch(BFC)	HSH-156		R	565	(B,212,89)	RS1/16S361J
	VR	201	(A,311,154) Volume 10kΩ(A)(GAIN)	CCS1241		R	566	(B,226,129)	RS1/16S361J
⚠	FU	100	(A,20,45) Fuse 30A	CEK1330		R	567	(B,210,89)	RS1/16S433J
⚠	FU	101	(A,20,68) Fuse 30A	CEK1330		R	568	(B,223,129)	RS1/16S433J
	AR	101	(B,315,81) Surge Protector	RCCA-201Q31UA-PI		R	569	(B,211,82)	RS1/16S681J
	AR	102	(B,310,92) Surge Protector	RCCA-201Q31UA-PI		R	570	(B,210,146)	RS1/16S681J
						R	571	(B,236,75)	RS1/16S223J
	RESISTORS					R	572	(B,228,154)	RS1/16S223J
	R	111	(B,295,72)	RS1/16S471J		R	573	(B,232,43)	RS1/16S820J
	R	112	(B,283,91)	RS1/16S471J		R	574	(B,219,197)	RS1/16S820J
	R	113	(B,295,62)	RS1/16S223J		R	575	(A,234,73)	RD1/4PU101J
	R	114	(B,275,88)	RS1/16S223J		R	576	(A,235,157)	RD1/4PU101J
	R	117	(B,292,61)	RS1/16S102J		R	577	(B,222,68)	RS1/16S681J
	R	118	(B,270,82)	RS1/16S102J		R	578	(B,218,155)	RS1/16S681J
	R	121	(B,296,46) 10kΩ	CCN1152		R	579	(B,226,74)	RS1/16S181J
	R	122	(B,273,73) 10kΩ	CCN1152		R	580	(B,221,147)	RS1/16S181J
	R	123	(B,296,44) 10kΩ	CCN1152		R	581	(B,235,70)	RS1/16S100J
	R	125	(B,292,44) 10kΩ	CCN1152		R	582	(B,240,161)	RS1/16S100J
	R	126	(B,287,83) 10kΩ	CCN1152		R	583	(B,220,69)	RS1/16S100J
	R	127	(B,291,64) 10kΩ	CCN1152		R	584	(B,218,153)	RS1/16S100J
	R	131	(B,276,70) 10kΩ	CCN1152		R	585	(A,282,34)	RD1/2PM100J
	R	134	(B,276,73) 10kΩ	CCN1152		R	586	(A,246,205)	RD1/2PM100J
	R	152	(B,288,100)	RS1/16S103J		R	587	(A,258,34)	RD1/2PM100J
	R	154	(B,287,100)	RS1/16S103J		R	588	(A,225,205)	RD1/2PM100J
	R	157	(B,283,116)	RS1/16S103J		R	589	(B,237,34)	RS1/16S221J
	R	159	(B,281,116)	RS1/16S103J		R	590	(B,211,205)	RS1/16S221J
	R	171	(B,285,184)	RS1/16S222J		R	591	(A,204,34)	RD1/2PM100J
	R	172	(B,295,180)	RS1/16S222J		R	592	(A,190,205)	RD1/2PM100J
	R	173	(B,287,179)	RS1/16S101J		R	593	(A,225,34)	RD1/2PM100J
	R	174	(B,299,180)	RS1/16S182J		R	594	(A,169,205)	RD1/2PM100J
	R	175	(B,289,184)	RS1/16S182J		R	595	(A,265,54) 1Ω	CCN1151
	R	176	(B,302,183)	RS1/16S221J		R	596	(A,261,195) 1Ω	CCN1151
	R	177	(B,316,181)	RS1/16S121J		R	597	(A,243,54) 1Ω	CCN1151
	R	178	(B,302,185)	RS1/16S132J		R	598	(A,240,195) 1Ω	CCN1151
	R	179	(B,317,185)	RS1/16S122J		R	599	(A,210,45) 1Ω	CCN1151
	R	180	(B,302,186)	RS1/16S104J		R	600	(A,184,186) 1Ω	CCN1151
	R	181	(B,318,185)	RS1/16S104J		R	601	(A,188,45) 1Ω	CCN1151
	R	182	(B,293,191)	RS1/16S273J		R	602	(A,206,186) 1Ω	CCN1151
	R	184	(B,300,192)	RS1/16S331J		R	621	(A,168,70)	RD1/4PU101J
	R	185	(B,288,196)	RS1/16S331J		R	622	(A,165,75)	RD1/4PU472J
	R	189	(B,284,198)	RS1/16S273J		R	623	(B,175,86)	RS1/16S563J
	R	198	(B,280,100)	RS1/16S0R0J		R	624	(B,151,85)	RS1/16S221J
	R	201	(B,250,143)	RS1/16S0R0J		R	625	(A,155,88)	RD1/4PU152J
	R	202	(B,252,134)	RS1/16S0R0J		R	630	(A,163,86)	RD1/4PU271J
	R	203	(B,285,176)	RS1/16S560J		R	631	(A,162,80)	RD1/4PU271J
	R	204	(B,297,177)	RS1/16S560J		R	632	(B,163,118)	RS1/16S223J
	R	206	(B,268,168)	RS1/16S222J		R	633	(B,171,106)	RS1/16S223J
	R	207	(B,273,164)	RS1/16S222J		R	634	(B,163,116)	RS1/16S223J
	R	505	(B,260,38)	RS1/16S682J		R	640	(B,156,102)	RS1/16S472J
	R	506	(B,265,202)	RS1/16S682J		R	641	(B,150,109)	RS1/16S682J
	R	507	(B,237,38)	RS1/16S682J		R	642	(B,136,110)	RS1/16S682J
	R	508	(B,243,202)	RS1/16S682J		R	644	(B,154,106)	RS1/16S103J
	R	509	(B,248,80)	RS1/16S564J		R	645	(B,150,118)	RS1/16S222J
	R	510	(B,226,126)	RS1/16S564J		R	646	(B,150,116)	RS1/16S472J
	R	511	(B,241,75)	RS1/16S473J		R	647	(B,146,117)	RS1/16S103J
	R	512	(B,222,125)	RS1/16S473J		R	648	(B,145,119)	RS1/16S103J
	R	513	(A,13,204)	RD1/2PM100J		R	649	(B,143,122)	RS1/16S473J
	R	514	(A,27,143)	RD1/2PM100J		R	650	(A,44,82)	RD1/4PU222J
	R	551	(B,230,43)	RS1/16S182J		R	666	(B,39,79)	RS1/16S1R0J
	R	552	(B,222,197)	RS1/16S182J		R	670	(B,270,118)	RS1/16S104J
	R	555	(B,236,90)	RS1/16S103J		R	671	(B,267,117)	RS1/16S472J
	R	556	(B,228,136)	RS1/16S103J		R	672	(A,263,107)	RD1/4PU103J
	R	557	(B,236,92)	RS1/16S473J		R	673	(B,269,99)	RS1/16S562J
	R	558	(B,226,133)	RS1/16S473J		R	674	(B,253,113)	RS1/16S472J
	R	559	(B,231,92)	RS1/16S331J		R	675	(B,251,113)	RS1/16S222J
	R	560	(B,225,143)	RS1/16S331J		R	676	(A,266,100)	RD1/4PU221J
	R	561	(B,233,92)	RS1/16S331J		R	831	(A,304,66)	RD1/4PU683J
	R	562	(B,225,145)	RS1/16S331J		R	832	(A,307,65)	RD1/4PU683J

=====Circuit Symbol and No.		===Part Name	Part No.
R	901	(B,141,65)	RS1/16S124J
R	921	(B,140,49)	RS1/16S472J
R	922	(B,140,45)	RS1/16S472J
R	923	(A,148,50)	RD1/4PU332J
R	924	(A,159,34)	RD1/4PU332J
R	931	(A,95,41)	RD1/2PM121J
R	932	(A,142,34)	RD1/2PM121J
R	933	(A,81,41)	RD1/2PM121J
R	934	(A,125,41)	RD1/2PM121J
R	935	(A,65,41)	RD1/2PM121J
R	936	(A,112,41)	RD1/2PM121J
R	941	(A,73,68)	RD1/2PM220J
R	942	(A,125,57)	RD1/2PM220J
R	951	(A,139,200)	RD1/4PU103J
R	952	(A,112,193)	RD1/4PU103J
R	953	(A,143,201)	RD1/2PM470J
R	954	(A,119,204)	RD1/2PM470J
R	961	(A,116,112)	RD1/2PM220J
R	966	(B,126,77)	RS1/16S153J
R	970	(A,165,202)	RD1/2PM182J
R	973	(B,152,63)	RS1/16S103J
R	974	(B,162,42)	RS1/16S472J
R	975	(B,162,45)	RS1/16S472J
R	976	(B,162,44)	RS1/16S472J
R	977	(B,161,37)	RS1/16S272J
R	978	(B,169,38)	RS1/16S272J
R	979	(B,169,41)	RS1/16S272J
R	980	(B,141,68)	RS1/16S105J
R	981	(B,149,77)	RS1/16S153J
R	982	(B,147,73)	RS1/16S102J
R	983	(B,142,76)	RS1/16S473J
R	984	(B,141,76)	RS1/16S202J
R	985	(B,142,71)	RS1/16S101J
R	986	(B,141,71)	RS1/16S223J
R	987	(B,132,88)	RS1/16S103J
R	991	(A,140,188)	RD1/2PM391J
R	992	(A,126,183)	RD1/2PM391J
R	993	(B,139,82)	RS1/16S222J
R	998	(B,270,124)	RS1/16S102J

CAPACITORS

C	111	(B,297,65)	CKSRYB471K50
C	112	(B,283,89)	CKSRYB471K50
C	113	(A,299,64)	CEAT100M50
C	114	(A,280,92)	CEAT100M50
C	121	(A,284,71)	CFTNA223J50
C	122	(A,284,75)	CFTNA223J50
C	123	(B,290,64)	CCSRCH470J50
C	124	(B,287,81)	CCSRCH470J50
C	125	(A,287,66)	CFTNA103J50
C	126	(A,284,79)	CFTNA103J50
C	127	(B,292,46)	CCSRCH470J50
C	128	(B,273,75)	CCSRCH470J50
C	151	(A,283,120)	CFTNA274J50
C	152	(A,303,94)	CFTNA274J50
C	153	(A,288,105)	CFTNA154J50
C	154	(A,301,100)	CFTNA154J50
C	171	(A,289,176)	CFTNA273J50
C	172	(A,300,177)	CFTNA273J50
C	173	(A,311,205)	CEANP4R7M50
C	181	(A,299,203)	CFTNA224J50
C	182	(A,300,197)	CFTNA224J50
C	184	(A,316,202)	CEANP4R7M50
C	551	(A,239,87)	CEAT101M16
C	552	(A,233,139)	CEAT101M16
C	553	(B,236,93)	CCSRCH680J50
C	554	(B,227,133)	CCSRCH680J50
C	555	(B,218,87)	CKSRYB471K50
C	556	(B,212,139)	CKSRYB471K50
C	559	(A,210,94)	CEAT221M10
C	560	(A,230,128)	CEAT221M10
C	561	(B,208,89)	CCSRCH150J50
C	562	(B,223,130)	CCSRCH150J50
C	563	(B,228,73)	CCSRCH470J50
C	564	(B,244,161)	CCSRCH470J50
C	565	(A,231,68)	CFTNA223J50
C	566	(A,218,160)	CFTNA223J50
C	567	(A,38,206)	CFTNA333J50
C	568	(A,27,158)	CFTNA333J50
C	569	(A,32,209)	CQHA102J2A
C	570	(A,27,147)	CQHA102J2A
C	571	(B,239,70)	CCSRCH220J50
C	572	(B,245,164)	CCSRCH220J50
C	573	(B,217,69)	CCSRCH220J50
C	574	(B,215,154)	CCSRCH220J50
C	575	(B,239,66)	CCSRCH220J50
C	576	(B,245,166)	CCSRCH220J50
C	577	(B,219,66)	CCSRCH220J50
C	578	(B,213,156)	CCSRCH220J50
C	581	(A,280,47)	CFTNA103J50
C	582	(A,269,198)	CFTNA103J50
C	650	(A,136,89)	CEAT220M25
C	651	(A,174,80)	CEAT471M16
C	652	(A,171,117)	CFTNA103J50
C	653	(A,159,120)	CFTNA103J50
C	666	(B,254,120)	CKSQYB104K50
C	671	(A,175,105)	CEAT101M16
C	672	(A,171,121)	CFTNA103J50
C	673	(A,143,112)	CEAT100M50
C	674	(A,142,106)	CEAT100M50
C	675	(A,167,104)	CFTNA103J50
C	676	(A,134,122)	CFTNA103J50
C	677	(A,26,89)	CFTNA224J50
C	681	(A,271,121)	CEANP221M10
C	691	(A,179,97)	CEAT220M25
C	831	(A,311,41)	CEAT100M50
C	832	(A,302,41)	CEAT100M50
C	903	(A,149,70)	CEAT2R2M50
C	941	(A,67,101) 3900µF/16V	CCH1644(P35)
C	942	(A,67,84) 3900µF/16V	CCH1644(P35)
C	943	(A,70,53)	CQHA472J2A
C	944	(A,129,52)	CQHA472J2A
C	951	(A,150,196)	CQHA102J2A
C	952	(A,123,202)	CQHA102J2A
C	953	(A,158,197)	CEAT470M16
C	954	(A,128,194)	CEAT470M16
C	955	(A,134,194)	CEAT470M25
C	956	(A,114,198)	CEAT470M25
C	957	(A,63,135) 2200µF/50V	CCH1647(P35)
C	958	(A,43,135) 2200µF/50V	CCH1647(P35)
C	959	(A,63,156) 2200µF/50V	CCH1647(P35)
C	960	(A,43,155) 2200µF/50V	CCH1647(P35)
C	962	(A,110,125)	CQHA102J2A
C	970	(A,173,64)	CFTNA103J50
C	971	(A,132,67)	CFTNA564J50
C	972	(A,168,67)	CEAT101M16
C	973	(A,151,77)	CQHA102J2A
C	974	(A,144,75)	CEAT221M16
C	975	(A,133,77)	CEANP470M16
C	980	(A,144,56)	CFTNA103J50
C	991	(A,146,182)	CEAT471M50(P45)

=====Circuit Symbol and No.		===Part Name	Part No.
C	992	(A,121,180)	CEAT471M50(P45)
C	993	(A,136,176)	CQHA102J2A
C	994	(A,130,176)	CQHA102J2A
C	999	(B,249,129)	CKSRYB224K16

6. ADJUSTMENT

There is no information to be shown in this chapter.

7. GENERAL INFORMATION

7.1 DIAGNOSIS

7.1.1 DISASSEMBLY

● **Removing the Case (Fig. 1)**

1. Remove three black screws (M3 x 10).
2. Remove six white screws (M3 x 6).
3. Remove four black screws (M3 x 5).

Caution)
When you disassemble/re-assemble the Product with it placed upside down, take care not to damage the top surface.

The Product uses several different types of screws. Take care not to confuse them during re-assembly.

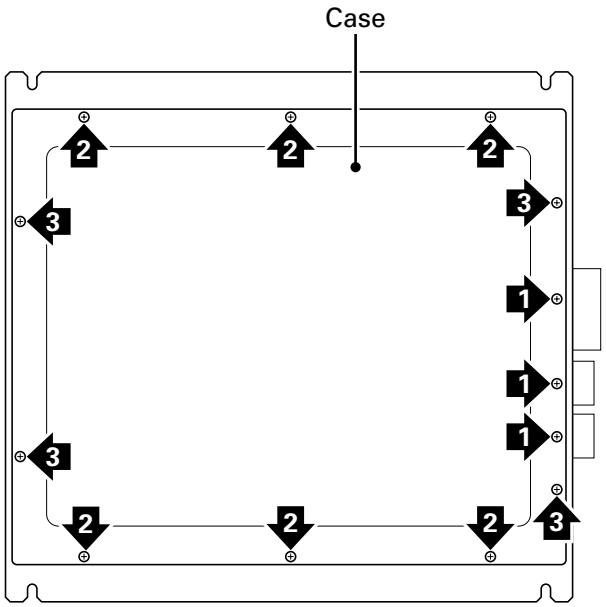

Fig. 1

● **Removing the Panel (Fig. 2)**

Panels are used for two sides individually, one for the RCA side and the other for the Power Terminal side.

Panel for the RCA side

1. Remove six black screws (M3 x 8).
2. Remove two black screws (M3 x 5).
   (They are used to secure the RCA Holder.)

Panel for the Power Terminal side

3. Remove six black screws (M3 x 8).

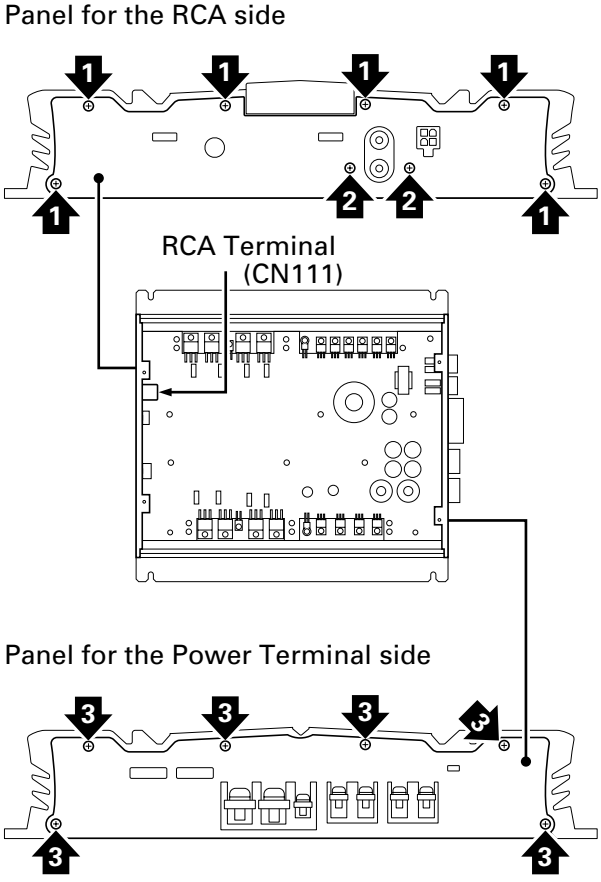

Fig. 2

● Removing the Amp Unit (Fig. 3)

1 Remove six black screws (M3 x 10).

2 Remove six white screws (M3 x 12).

A Screw holes in the PCB are printed with numbers 1 to 12.

Remove screws in numerical order.
Re-assembly takes the reverse order of disassembly.

Caution)
The Amp Unit is adhered on the Heat Sink with silicon grease. This means forcibly removing the Amp Unit from the Heat Sink may break the PCB.

3 Remove all of the twelve screws. Then, remove the two black screws (M3 x 5).
Tighten screws whose length is M3 x 8 or more into the two screw holes so as to raise the Amp Unit above the Heat Sink. Then, remove the Amp Unit.
(Since screw threads differ, 1 and 2 screws cannot be used.)

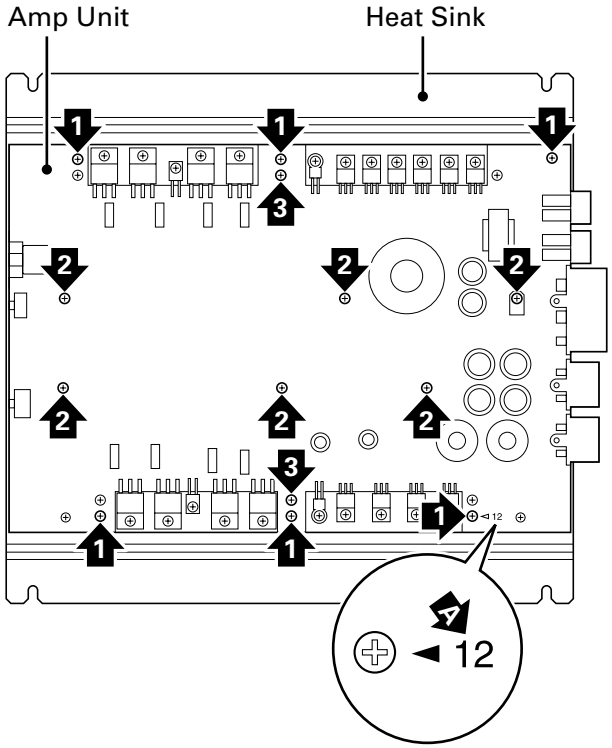

Fig. 3

● Caution when re-assembling the Amp Unit and the Heat Sink

Be aware that the RCA Terminal may break unless the Amp Unit and the Heat Sink are assem-bled following the correct procedures given below.

1) Secure the RCA-side Panel on the Heat Sink with screws. (Fig. 2)

2) Place the Amp Unit on the Heat Sink aligning with two studs. (Fig. 4)

3) Move the Amp Unit until the RCA Holder on the Amp Unit comes in contact with the inside of the Panel. (Fig. 4)

Caution in steps 2) and 3)
When you place the Amp Unit on the Heat Sink, you will find no positioning marks to determine the direction of two panels. To position them correctly, the Amp Unit needs to be moved to the place where it comes in contact with the RCA-side panel.
If you do not position them, an excessive force can be applied to the RCA Terminal. This may result in breakage.

4) Secure the RCA-side Panel and the RCA Holder with screws. (Fig. 2)

5) Secure the Amp Unit on the Heat Sink with screws. (Fig. 3)

6) Secure the Panel for the Power Terminal side in place with screws. (Fig. 2)

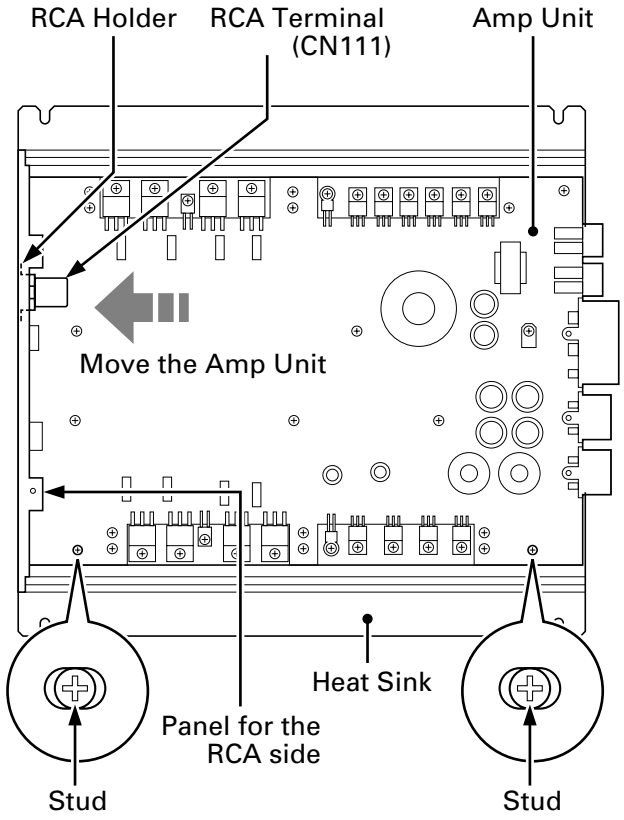

Fig. 4

7.1.2 CONNECTOR FUNCTION DESCRIPTION (GM-5100T/XU/EW)

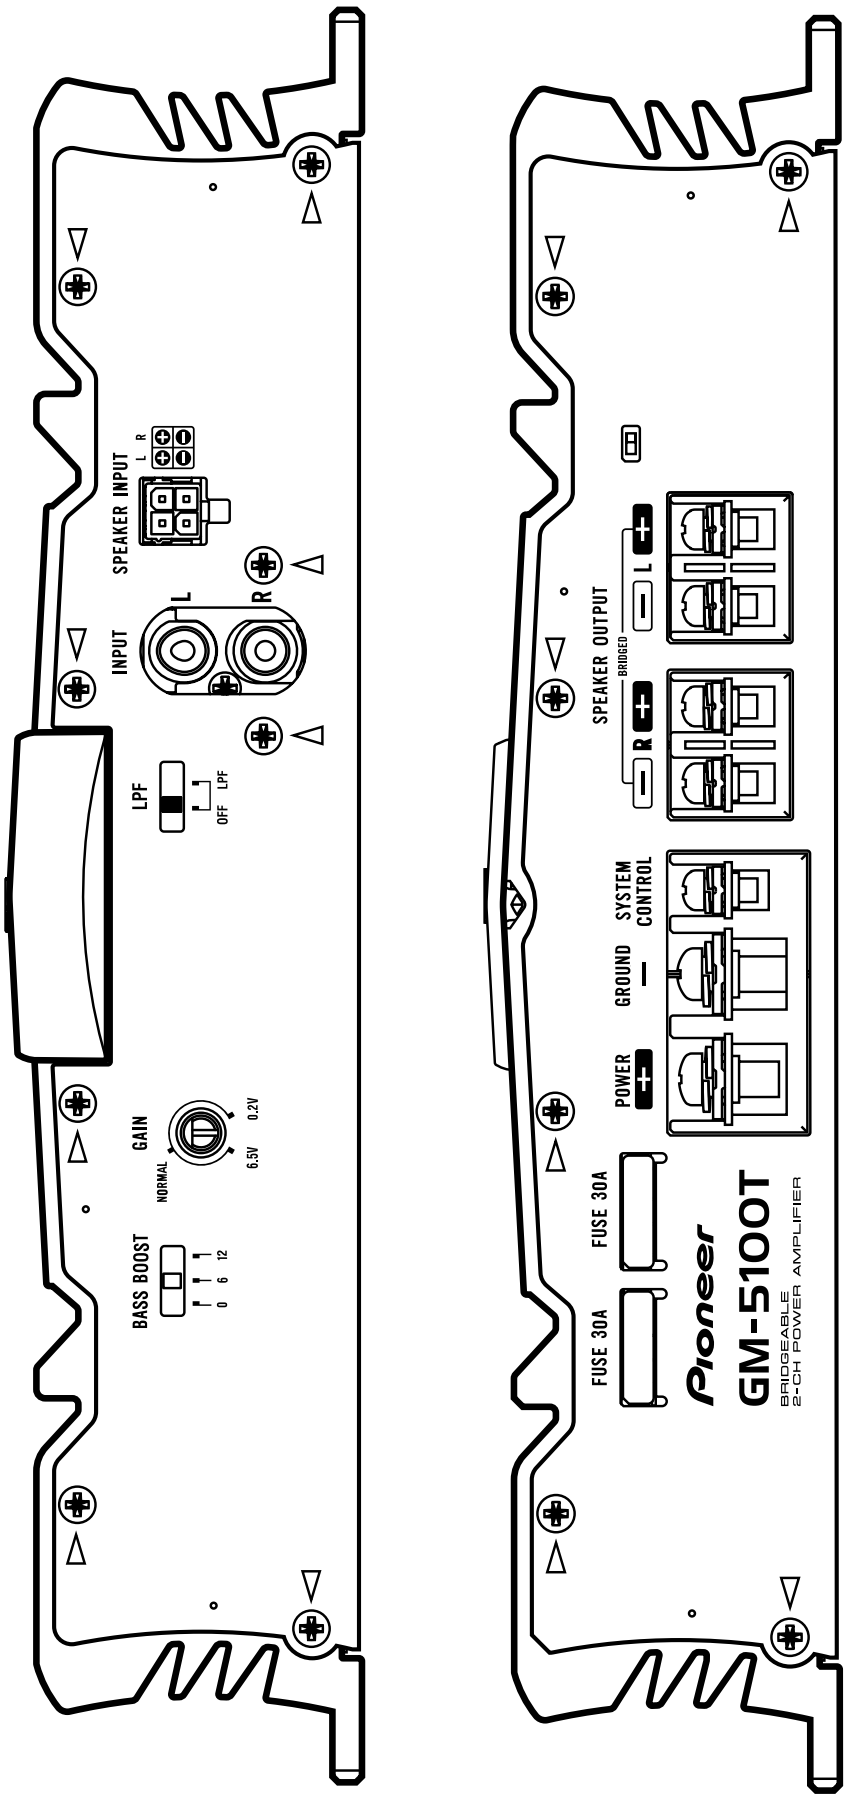

8. OPERATIONS (GM-5100T/XU/EW)